


Connector Joining Wire Harness and Wire Harness

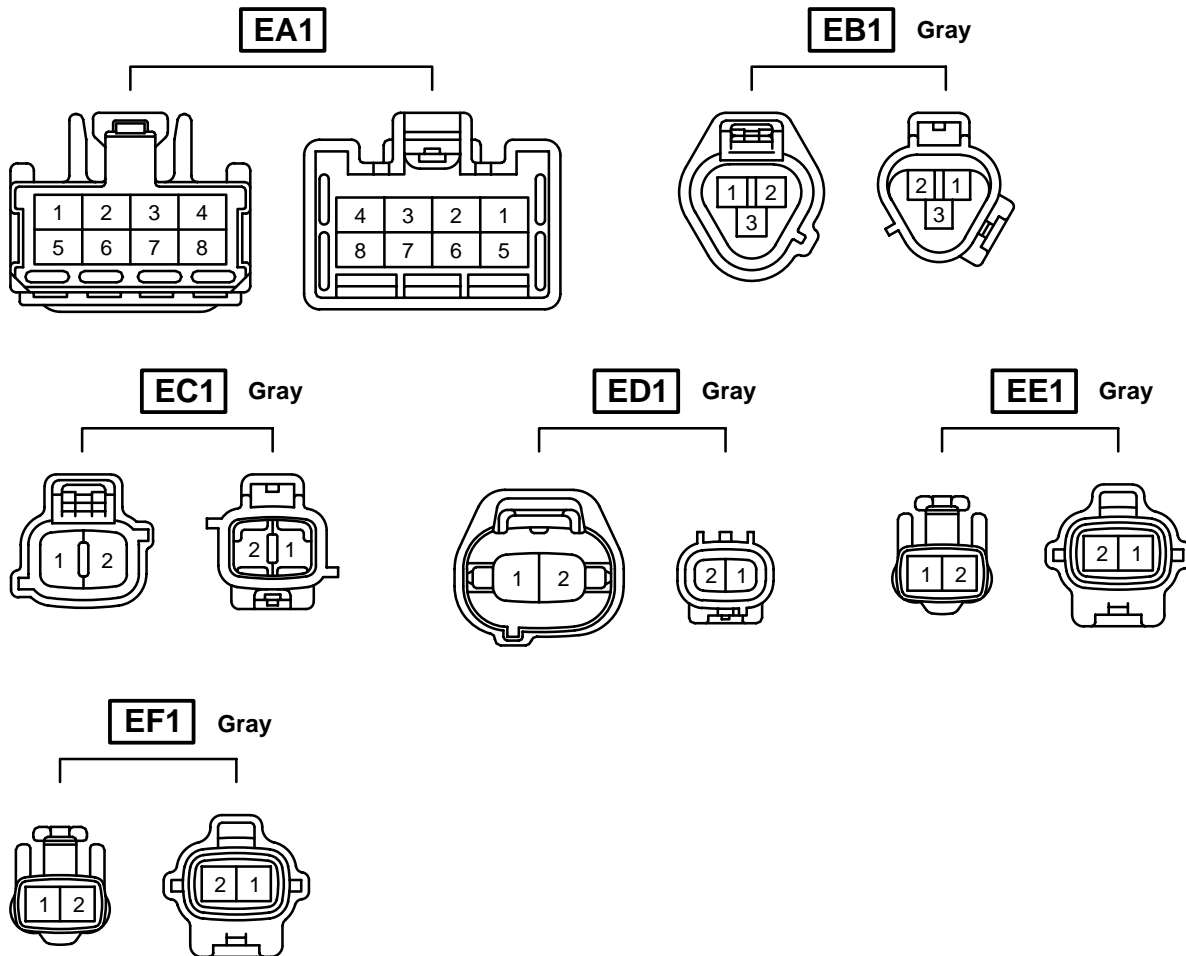

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Near the Engine Room R/B)
EB1	Engine Wire and Engine No.6 Wire (Near the Starter Motor)
EC1	Engine Wire and Engine No.4 Wire (Near the Starter Motor)
ED1	Engine Room No.4 Wire and Engine Room Main Wire (Near the Radiator Fan Motor)
EE1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight LH)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight RH)