


Connector Joining Wire Harness and Wire Harness

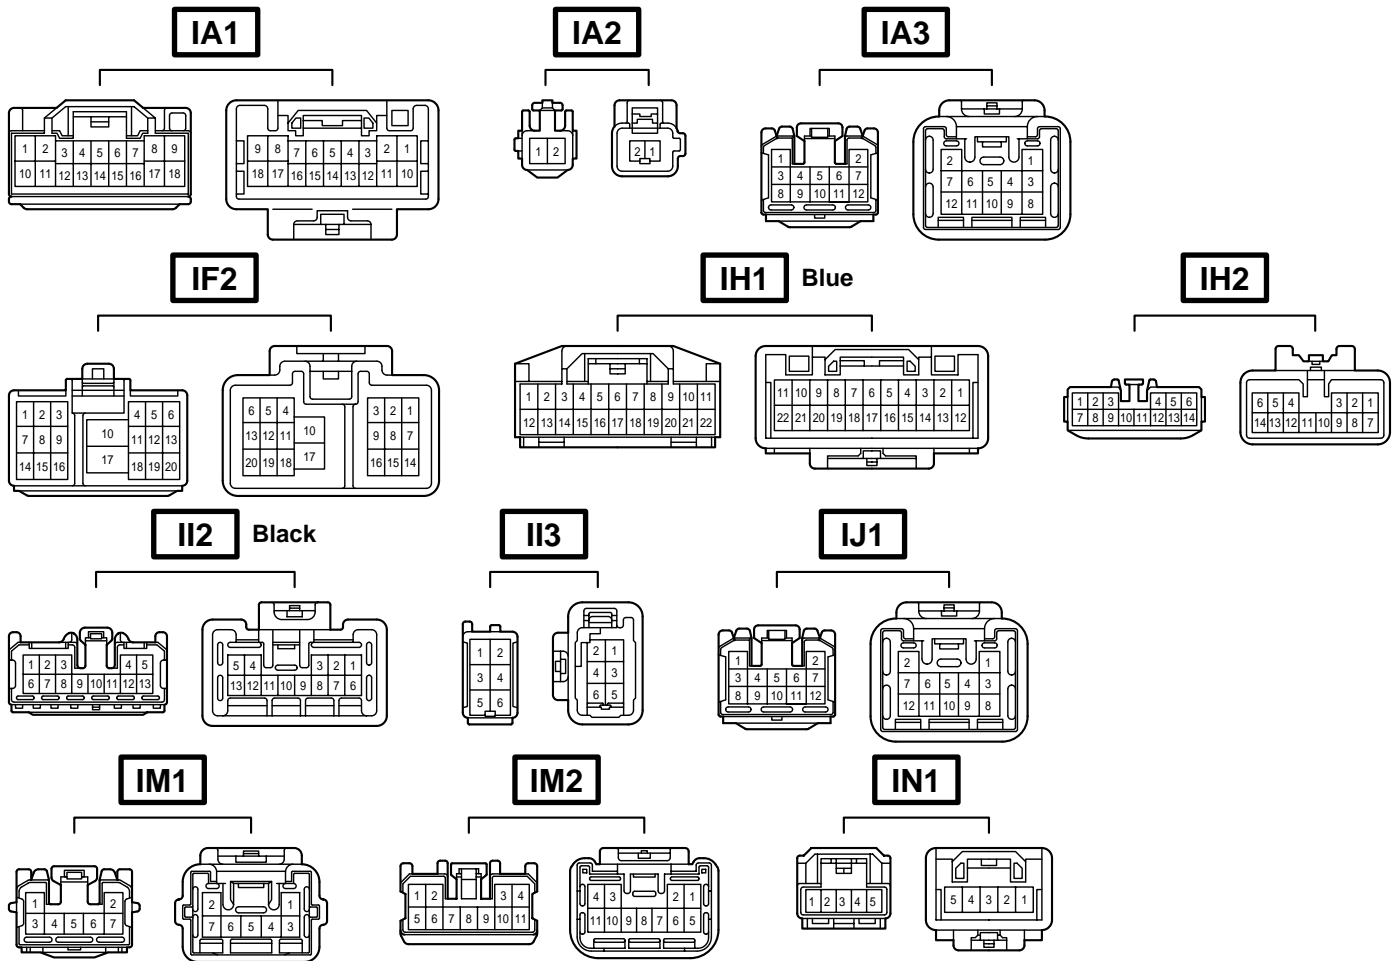

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IA2	
IA3	
IF2	Instrument Panel Wire and Cowl No.2 Wire (Behind the Combination Meter)
IH1	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IH2	
II2	Instrument Panel Wire and Floor No.2 Wire (Upper part of Front Body Pillar RH)
II3	
IJ1	Engine Room Main Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IM1	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IM2	
IN1	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)