


## ■ HEADLIGHT BEAM LEVEL CONTROL SYSTEM

This system keeps the beam of the headlights adjusted to the appropriate level in accordance with the number (weight) of passengers and volume of luggage. The headlight beam level can be adjusted by operating the headlight beam level control switch. This system is standard equipment for Europe model.

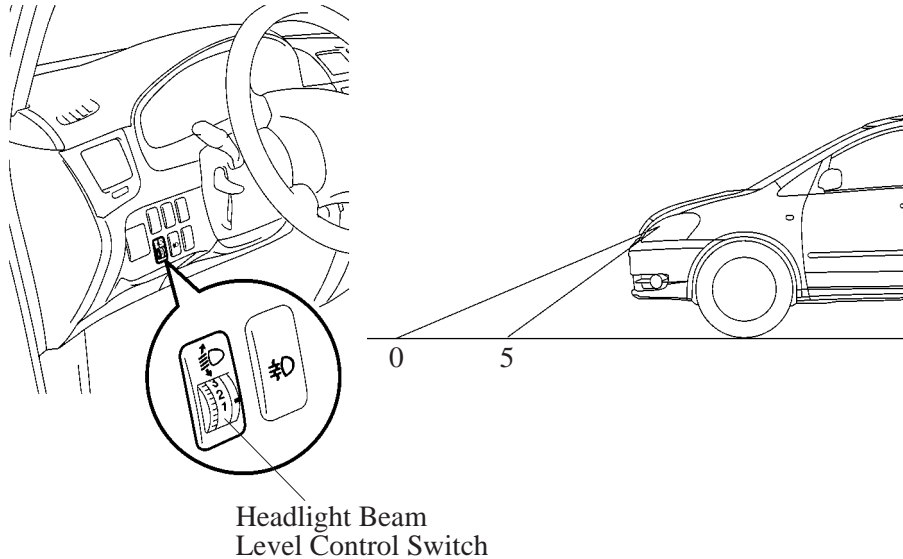


206BE02

## ■ ILLUMINATED ENTRY SYSTEM

- When a door is unlocked through a driver door key operation or transmitter operation, or if a door is opened or closed, the illuminated entry system turns ON the interior light, ignition key illumination, and luggage light.

If the ignition switch is turned to the ACC or ON position or if all doors are locked during these (the said lights) lights are ON approx. 15 seconds, the lights will immediately turn OFF. This system is controlled by the Body ECU.

- The model with double locking system cannot operate the illuminated entry system using a key cylinder.

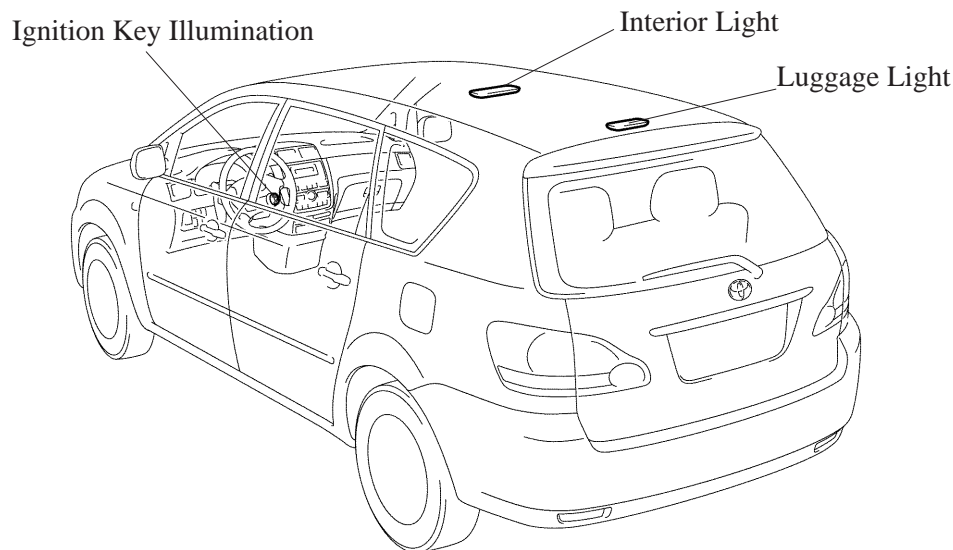

LHD Model

206BE03