



## ■ SPARE TIRE CARRIER

Because a storage space has been provided under the floor of the luggage compartment, the spare tire carrier has been located under the left front seat. The spare tire carrier has been designed exclusively for a compact spare tire.

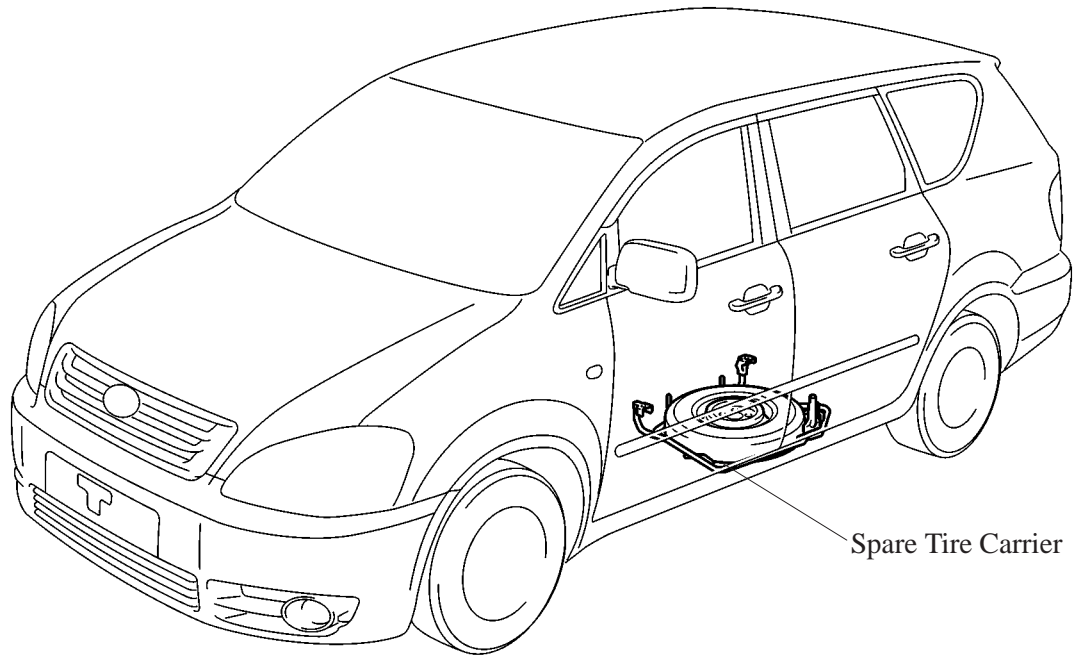

206BO16

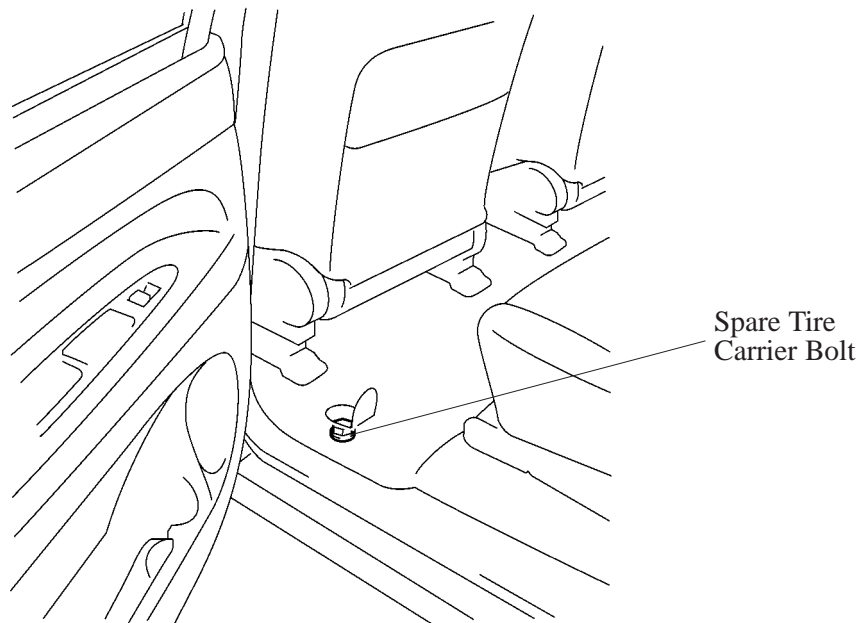

206BO17

### Service Tip

This carrier has been designed exclusively for a compact spare tire, and it cannot accommodate a ground tire. After changing the tires, wrap the punctured tire with a wrapping sheet stored in the required tool bag, and store it in the luggage compartment.