
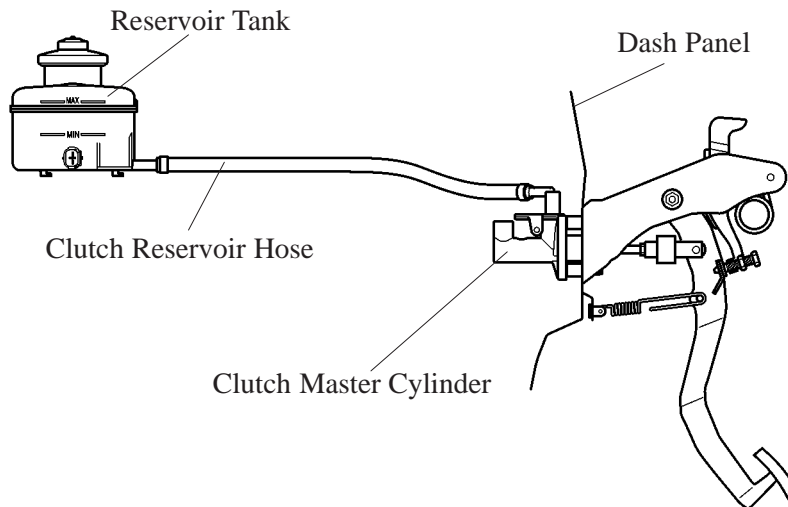


## ■ MASTER CYLINDER

- The clutch master cylinder and the reservoir tank are provided separately, and the reservoir tank is also shared by the brake system.  
This reservoir tank has a partition plate that separates the fluid for the brake and clutch systems, only the amount of fluid over a prescribed amount is shared.
- On the RHD model, the clutch master cylinder is installed on the engine compartment side of the dash panel, and on the LHD model, it is installed in the cabin, above the clutch pedal bracket.

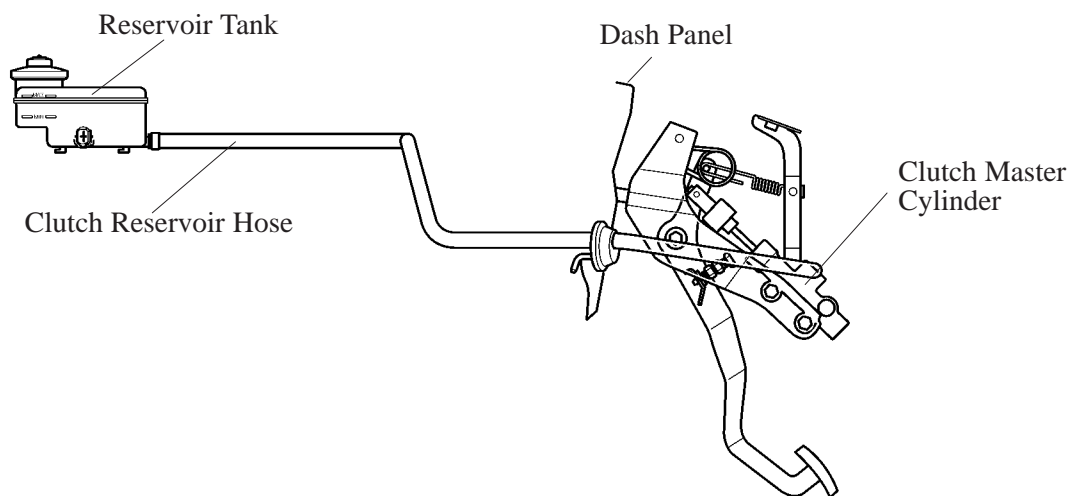

206CH01

**RHD Model**

206CH02

**LHD Model**