

## ■ CRUISE CONTROL SYSTEM

### 1. General

- Once the system is set to a desired vehicle speed, the throttle valve position is adjusted automatically to maintain the vehicle speed at that speed without depressed the accelerator pedal.
- The cruise control ECU has been integrated in the engine ECU.

#### ► System Diagram ◀

