

## 4. Diagnosis

- If a malfunction occurs in the cruise control system, during cruise control driving, the engine ECU actuates Auto Cancel of the cruise control and turns on and off the cruise main indicator light to inform the driver of a malfunction. At the same time, the malfunction is stored in memory as a DTC (Diagnostic Trouble Code).
- The DTC can be accessed by connecting a hand-held tester to DLC3 terminal or the SST (09843-18040) to the Tc and CG terminals of the DLC3 and reading the blinking of the cruise main indicator light. A hand-held tester can be used to read 5-digit codes. With the SST, 2-digit codes can be read from the number of blinks of the cruise main indicator light. For details, see the Avensis Verso Repair Manual Supplement (Pub. No. RM1032E).
- The DTC listed below is used.

DTC No.	Detection Item	DTC No.	Circuit Inspection
5-digit		2-digit	
P0500	Vehicle Speed Sensor “A”	21	Vehicle Speed Sensor Circuit Open
P0503	Vehicle Speed Sensor “A” Intermittent/Erratic/High	23	Vehicle Speed Signal Abnormal
P0571	Brake Switch “A” Circuit	52	Stop Light Switch Circuit Open or Short
P0607	Control Module Performance	54	Input Signal Abnormal