

CHECK FOR INTERMITTENT PROBLEMS

HINT:

Intelligent Tester II only:

Inspect the vehicle's ECM using check mode. Intermittent problems are easier to detect with a intelligent tester II when the ECM is in check mode. In check mode, the ECM uses 1 trip detection logic, which has a higher sensitivity to malfunctions than normal mode (default) using 2 trip detection logic.

- (a) Clear the DTC(s) (see page 05-20).
- (b) Switch the ECM from normal mode to check mode using the intelligent tester II (see page 05-22).
- (c) Perform a simulation test (see page 01-22).
- (d) Check the connector(s) and terminal(s) (see page 01-32).
- (e) Wiggle the harness(es) and connector(s) (see page 01-32).