


## DIAGNOSIS SYSTEM

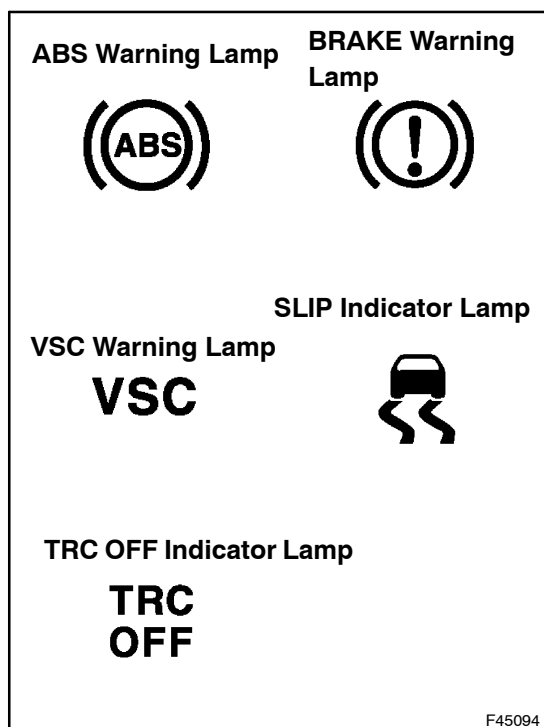

### 1. DIAGNOSIS

- (a) If the skid control ECU detects a malfunction, the ABS, Brake, VSC warning lamp and TRC OFF indicator lamp will come on to warn the driver.
- The table below indicates which lamps come on when there is a malfunction in a particular function.

Item/Trouble Area	ABS	EBD	BA (Brake Assist)	TRC	VSC
ABS Warning Lamp	○	○	○	–	–
Brake Warning Lamp	–	○	–	–	–
TRC OFF Indicator Lamp	○	○	○	○	○
VSC Warning Lamp	○	○	○	○	○

○: Light ON

–: Light OFF

- The DTCs are simultaneously stored in memory. The DTCs can be read by connecting the SST between TC and CG terminals of the DLC3 and observing the blinking of the ABS warning lamp and VSC warning lamp, or by connecting the intelligent tester II.
- This system has a sensor signal check function (TEST MODE).  
The DTC can be read by connecting the SST between terminals TS and CG of the DLC3 and observing the blinking of the ABS warning lamp and VSC warning lamp, or by connecting the intelligent tester II.