

<b>DTC</b>	<b>C1201/51</b>	<b>ENGINE CONTROL SYSTEM MALFUNCTION</b>
------------	-----------------	--

## CIRCUIT DESCRIPTION

If trouble occurs in the engine control system, the ECM transmits a signal indicating the abnormality to the skid control ECU.

The skid control ECU sets this DTC and the skid control ECU prohibits TRC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201/51	At the engine speed of 500 rpm, a trouble signal in the engine control system continues for 5 sec. or more.	Engine control system

## INSPECTION PROCEDURE

<b>1</b>	<b>CHECK DTC FOR ENGINE</b>
----------	-----------------------------

(a) Check if the normal code is recorded for EFI system.

Normal System Code	A
Trouble Code	B

**B**

**REPAIR ENGINE CONTROL SYSTEM  
ACCORDING TO DTC OUTPUT**

**A**

<b>REPLACE ECM</b>
--------------------