

# DTC C1223/43 ABS CONTROL SYSTEM MALFUNCTION

## HINT:

- This DTC is output when the VSC system detects a malfunction in the ABS system.
- When DTC C1223/43 is memorized, there is no malfunction in the Skid control ECU.

## CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1223/43	Malfunction in ABS control system	ABS control system

### 1 CHECK DTC(FOR ABS SYSTEM)

- (a) Clear the DTCs ([see page 05-625](#)).
- (b) Turn the ignition switch to the ON position.
- Are the same DTCs recorded? ([see page 05-625](#))

NO

PROCEED TO NEXT CIRCUIT INSPECTION  
SHOWN IN PROBLEM SYMPTOMS TABLE  
([SEE PAGE 05-620](#))

YES

REPAIR CIRCUIT INDICATED BY OUTPUT DTC