

# ELECTRONIC CONTROLLED AUTOMATIC TRANSAXLE [ECT]

05CVL-05

## PRECAUTION

### NOTICE:

Perform the RESET MEMORY (AT initialization) when replacing the automatic transaxle assy, engine assy or ECM (see [page 05-762](#)).

### HINT:

Initialization can not be completed by only disconnecting the battery terminal.