

HOW TO PROCEED WITH TROUBLESHOOTING

1 VEHICLE BROUGHT TO WORKSHOP

2 CUSTOMER PROBLEM ANALYSIS (SEE PAGE 05-1011)

3 BASIC INSPECTION

(a) Basic inspection.

(1) Check the battery voltage.

Standard: 11 to 14 V

(b) Check the power supply to the radio receiver Assy.

(1) Turn the ignition switch to the ACC position.

(2) Check whether or not the display appears on the radio receiver Assy.

DISPLAY DOES NOT APPEAR (PROCEED TO PROBLEM SYMPTOM TABLE)
(SEE PAGE 05-1024)

DISPLAY APPEARS (GO TO STEP 4)

4 DTC CHECK (SEE PAGE 05-1012)

DTC IS OUTPUT (GO TO STEP 5)

DTC IS NOT OUTPUT (GO TO STEP 6)

5 DTC CHART (SEE PAGE 05-1018)

GO TO STEP 7

6 PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1024)

7 CIRCUIT INSPECTION AND PART INSPECTION (SEE PAGE 05-1025 – 05-1069)

8 IDENTIFICATION OF PROBLEM

9	CONFIRMATION TEST
---	-------------------



END
