

## CD CANNOT BE EJECTED

### INSPECTION PROCEDURE

#### 1 PRESS "EJECT" AND CHECK OPERATION

(a) Press "EJECT" and check the operation.

- (1) Press the CD EJECT switch of the radio receiver assembly for 2 seconds or more to see if the CD is ejected.

**OK: CD is ejected.**

Reference:

If the CD is not ejected, bring the vehicle in for repair.

Do not attempt to remove it by force.

NG

**REPLACE RADIO RECEIVER ASSY  
(SEE PUB. NO. RM864E, PAGE 67-2)**

OK

#### 2 CHECK IF A PROPER CD IS INSERTED

(a) Check that a normal audio CD is inserted.

- (1) Check in what conditions the sound skipping occurs.

**OK: Driving on a bad road.**

NG

**REPLACE RADIO RECEIVER ASSY  
(SEE PUB. NO. RM864E, PAGE 67-2)**

OK

#### 3 REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with another and recheck.

- (1) Check the installation condition of the radio receiver assembly.

**OK: Installed properly.**

NG

**REPLACE RADIO RECEIVER ASSY  
(SEE PUB. NO. RM864E, PAGE 67-2)**

OK

**CD IS FAULTY**