

**CASSETTE TAPE CANNOT BE INSERTED OR PLAYED****INSPECTION PROCEDURE****1 CHECK FOR ANY FOREIGN OBJECT**

(a) Check for any foreign objects.

- (1) Check that no foreign objects or defects are detected in the cassette tape player of the radio receiver assembly.

**OK: No foreign objects or defects are detected.**

**NG**

**REMOVE FOREIGN OBJECT**

**OK**

**2 CHECK CASSETTE TAPE**

(a) Check the cassette tape.

- (1) Check that the cassette tape is a normal tape with music or voice recorded.

**OK: Proper cassette tape with music or voice recorded.**

**NG**

**CASSETTE TAPE IS FAULTY**

**OK**

**3 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK**

(a) Replace the cassette tape with another one and recheck.

- (1) Replace the cassette tape with another normal one to see if the same trouble occurs again.

**OK: The function returns to be normal.**

**NG**

**REPLACE RADIO RECEIVER ASSY  
(SEE PUB. NO. RM864E, PAGE 67-2)**

**OK**

**CASSETTE TAPE IS FAULTY**