


MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1 CHECK MAP DISC

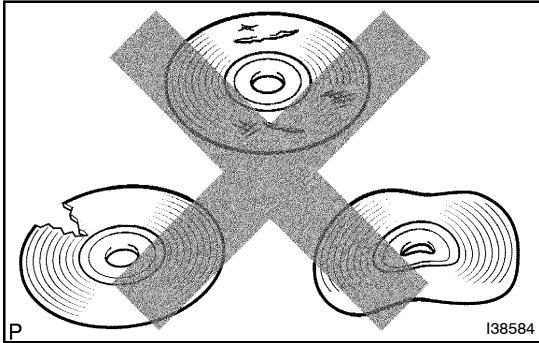


- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG

CHECK THE MAP DISC

OK

2 CHECK RADIO AND NAVIGATION ASSY

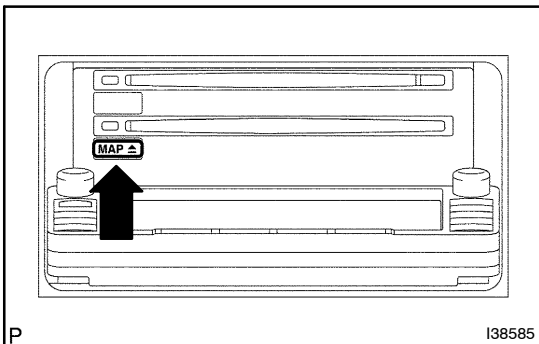

- (a) Check if the "MAP" indicator near the disc slot is on.
OK: It is not on.

NG

PRESS THE EJECT SWITCH TO EJECT THE DISC

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
 (SEE PAGE 05-1094)