


# CURSOR OR MAP ROTATES WHEN VEHICLE IS STOPPED

## INSPECTION PROCEDURE

### 1 CHECK THE CONDITION

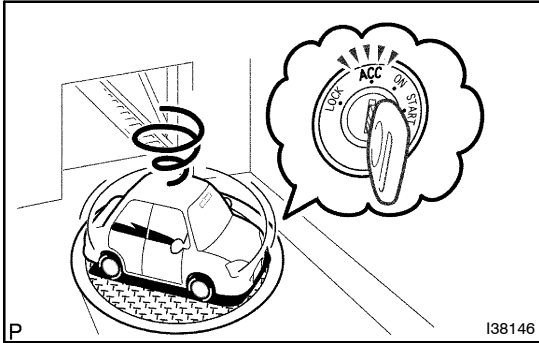

(a) Check with the customer if the vehicle has been turned by a turntable at parking.

**OK:** The vehicle has not been turned by a turntable.

**HINT:**

If the ignition switch is turned to the ACC or ON position while the vehicle is being turned by a turntable, the system may store the angular velocity at this time. For this reason, the vehicle position cursor could deviate.

**NG**

**TURN IGNITION SWITCH TO ON POSITION WHEN VEHICLE IS COMPLETELY STOPPED**

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE**  
(SEE PAGE 05-1094)