

DTC	P0607/54 INPUT SIGNAL CIRCUIT MALFUNCTION
------------	--

CIRCUIT DESCRIPTION

This DTC indicates the internal abnormalities of the ECM.

DTC No.	Detection Item	Trouble Area
P0607/54	The ECM has a supervisory CPU and a control ECU inside. When each input STP signal is different for 0.15 sec. or more, this trouble code is output. This trouble code is output after 0.4 sec. has passed from the time the cruise cancel input signal (STP input) is input into the ECM.	<ul style="list-style-type: none"> • ECM

HINT:

The ECM receives signals from each sensor to control all the functions of the cruise control with the micro-computer.

When a trouble code is detected, fail safe remains on until the ignition switch is turned off.

INSPECTION PROCEDURE

1	REPLACE ECM (SEE PAGE 10-30)
---	-------------------------------------