



REPLACEMENT


1. DRAIN ENGINE COOLANT (See page 6-7)
2. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)
3. REMOVE FRONT WIPER ARM HEAD CAP (3 LINK TYPE FR WIPER)
4. REMOVE FR WIPER ARM LH (3 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
5. REMOVE COWL TOP VENTILATOR LOUVER CENTER NO.1 (4 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
6. REMOVE FR WIPER ARM LH (4 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
7. REMOVE FRONT WIPER ARM HEAD CAP
8. REMOVE FR WIPER ARM RH (See Pub. No. RM864E, page 66-9)
9. REMOVE COWL TOP VENTILATOR LOUVER SUB-ASSY (See Pub. No. RM864E, page 66-9)
10. REMOVE WIPER LINK ASSY (See Pub. No. RM864E, page 66-9)

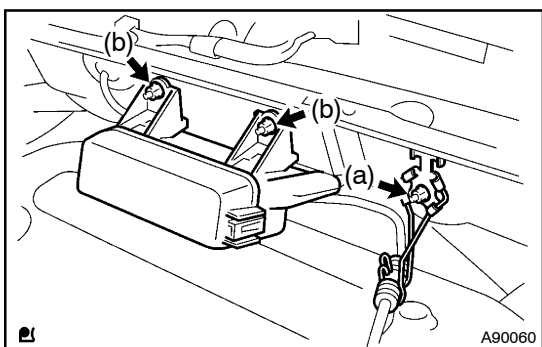


11. REMOVE COWL TOP PANEL SUB-ASSY OUTER
 - (a) Remove the nut, then remove the transmission control cable No. 2 bracket.
 - (b) Remove the 2 nuts, then remove the engine room relay block No. 2 (with RR heater).

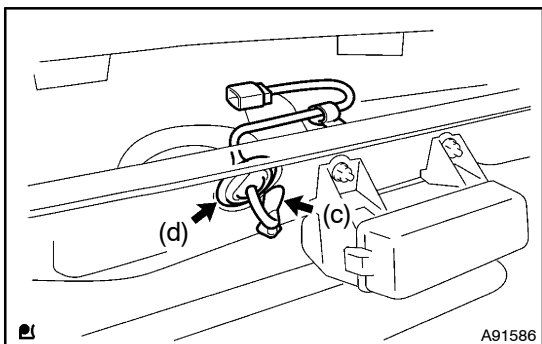


- (c) Remove the wire harness clamp.
 - (d) Remove the grommet from the cowl top outer panel.

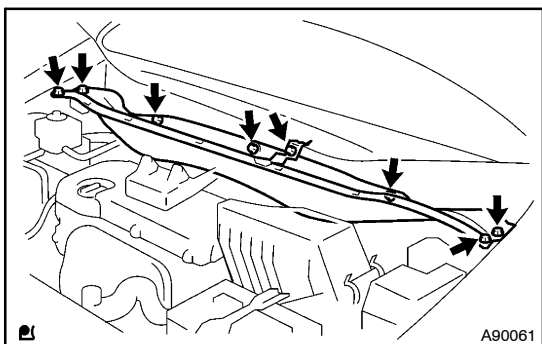


- (e) Remove the 8 bolts, then remove the cowl top panel outer.

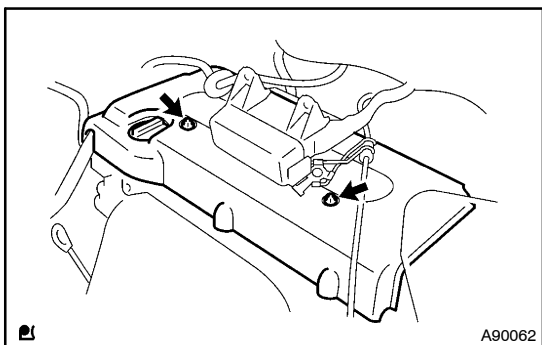**12. REMOVE ENGINE COVER SUB-ASSY NO.1**


- (a) Remove the 2 nuts, then remove the engine cover No. 1.

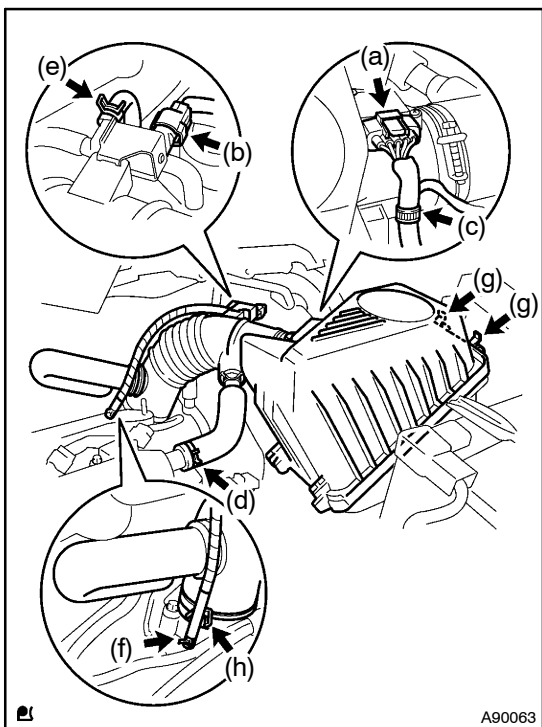**13. REMOVE AIR CLEANER CAP SUB-ASSY**


- (a) Disconnect the mass air flow meter connector.
 (b) Disconnect the vacuum switching valve No. 1 connector.
 (c) Remove the wire harness clamp.
 (d) Disconnect the ventilation hose from the cylinder head cover.
 (e) Disconnect the fuel vapor feed hose No. 1 from the vacuum switching valve No. 1.
 (f) Disconnect the fuel vapor feed hose No. 2 from the throttle body.
 (g) Unfasten the 2 hook clamps.
 (h) Unfasten the air cleaner hose clamp No. 1, then remove the air cleaner cap.

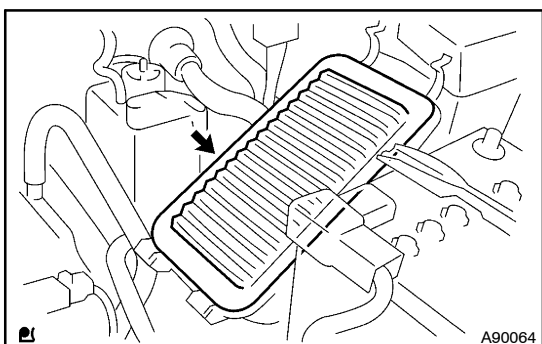


- (i) Remove the air cleaner filter element from the air cleaner case.

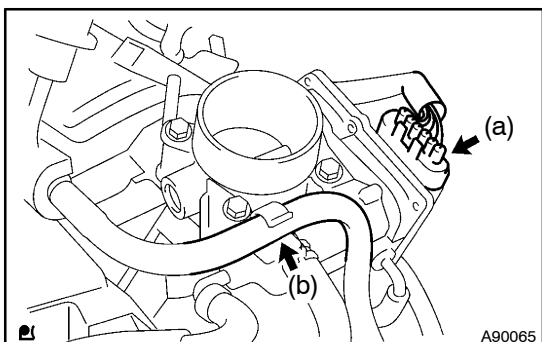**14. REMOVE THROTTLE BODY ASSY**


- (a) Disconnect the throttle control motor connector.
 (b) Remove the fuel tube from the clamp.

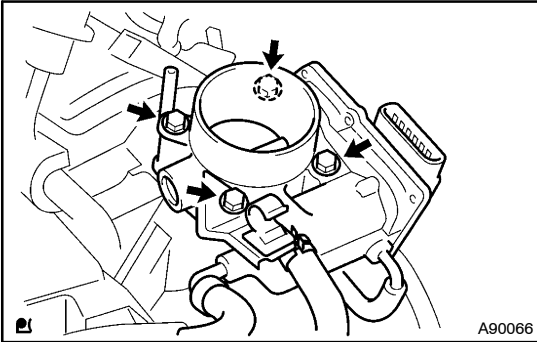

- (c) Remove the 4 bolts, then remove the fuel pipe support and throttle body.

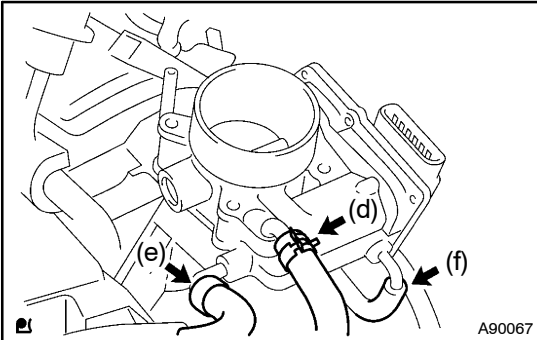

- (d) Disconnect the water by-pass hose No. 1 from the throttle body.
 (e) Disconnect the water by-pass hose No. 2 from the throttle body.
 (f) Disconnect the throttle body hose from the throttle body.

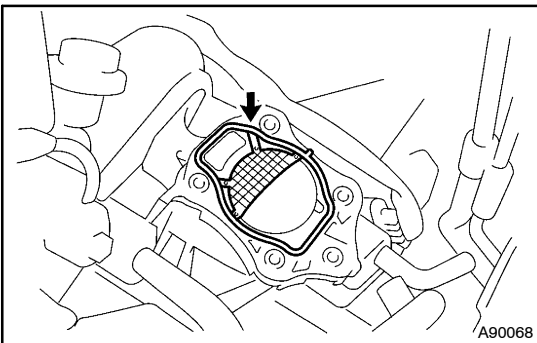

- (g) Remove the gasket from the intake manifold.

15. INSTALL THROTTLE BODY ASSY

- (a) Install a new gasket to the intake manifold.
 (b) Connect the throttle body hose to the throttle body.
 (c) Connect the water by-pass hose No. 2 to the throttle body.
 (d) Connect the water by-pass hose No. 1 to the throttle body.
 (e) Install the throttle body and fuel pipe support with the 4 bolts.
Torque: 30 N·m (305 kgf·cm, 22 ft·lbf)
 (f) Install the fuel tube to the clamp.
 (g) Connect the throttle control motor connector.

16. INSTALL AIR CLEANER CAP SUB-ASSY

17. INSTALL COWL TOP PANEL SUB-ASSY OUTER

- (a) Install the cowl top panel outer with the 8 bolts.
Torque: 8.5 N·m (85 kgf·cm, 75 in·lbf)
 (b) Install the grommet to the cowl top panel outer.
 (c) Install the wire harness clamp.
 (d) Install the engine room relay block No. 2 with the 2 nuts (with RR heater).
 (e) Install the transmission control cable No. 2 bracket with the nut.
Torque: 8.0 N·m (80 kgf·cm, 71 in·lbf)

18. INSTALL WIPER LINK ASSY (See Pub. No. RM864E, page 66–9)

19. **CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)**
Torque: 3.9 N·m (40 kgf·cm, 35 in.·lbf)
20. **ADD ENGINE COOLANT (See page 6-7)**
21. **CHECK FOR ENGINE COOLANT LEAKS (See page 6-1)**
22. **INSTALL ENGINE COVER SUB-ASSY NO.1**
Torque: 9.0 N·m (90 kgf·cm, 80 in.·lbf)
23. **INSTALL COWL TOP VENTILATOR LOUVER SUB-ASSY**
24. **INSTALL FR WIPER ARM RH (See Pub. No. RM864E, page 66-9)**
25. **INSTALL FRONT WIPER ARM HEAD CAP**
26. **INSTALL FR WIPER ARM LH (3 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)**
27. **INSTALL FRONT WIPER ARM HEAD CAP (3 LINK TYPE FR WIPER)**
28. **INSTALL FR WIPER ARM LH (4 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)**
29. **INSTALL COWL TOP VENTILATOR LOUVER CENTER NO.1 (4 LINK TYPE FR WIPER)**