


ACCELERATOR PEDAL ROD ASSY (1AZ-FE/2AZ-FE)

REPLACEMENT

10008-01

1. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

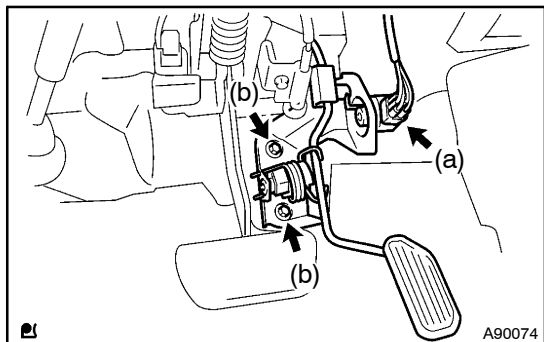

2. REMOVE ACCELERATOR PEDAL ROD ASSY

- (a) Disconnect the accelerator position sensor connector.
- (b) Remove the 2 bolts, then remove the accelerator pedal rod.

3. INSTALL ACCELERATOR PEDAL ROD ASSY

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

4. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)