


ECM (1AZ-FE/2AZ-FE/1CD-FTV)

10000-01

REPLACEMENT

1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
2. **REMOVE GLOVE COMPARTMENT DOOR ASSY (See Pub. No. RM864E on page 71-10)**

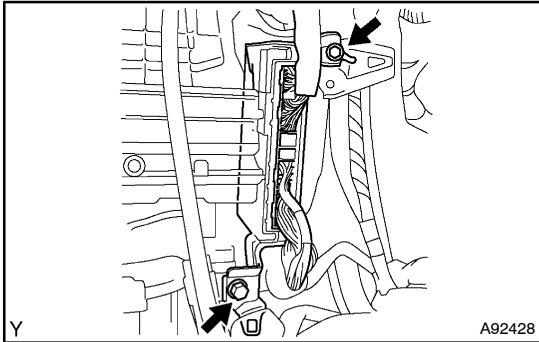

3. REMOVE ECM

- (a) Disconnect the 4 ECM connectors (1CD-FTV).
- (b) Disconnect the 5 ECM connectors (1AZ-FE, 2AZ-FE).
- (c) Disconnect the wire harness clamp.
- (d) Remove the 2 bolts and ECM.
- (e) Remove the 2 screws and ECM bracket from the ECM.
- (f) Remove the 4 screws and ECM bracket No. 2 from the ECM.

4. INSTALL ECM

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

5. **INSTALL GLOVE COMPARTMENT DOOR ASSY (See Pub. No. RM864E on page 71-10)**
6. **CONNECT BATTERY NEGATIVE TERMINAL**

Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)