


INSPECTION

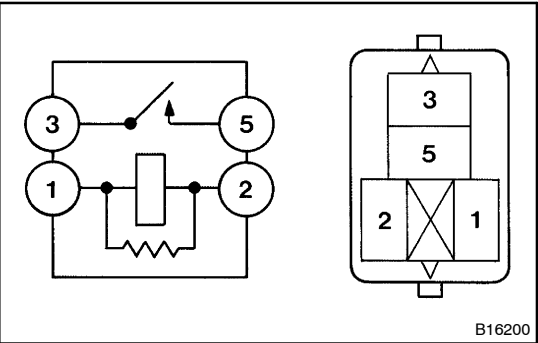


1. INSPECT COOLING FAN RELAY

- (a) Inspect the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Specified condition:

Tester Connection	Specified Condition
3 – 5	10 kΩ or Higher
3 – 5	Below 1 Ω (When battery voltage is applied to terminals 1 and 2)

If the resistance is not as specified, replace the cooling fan relay.

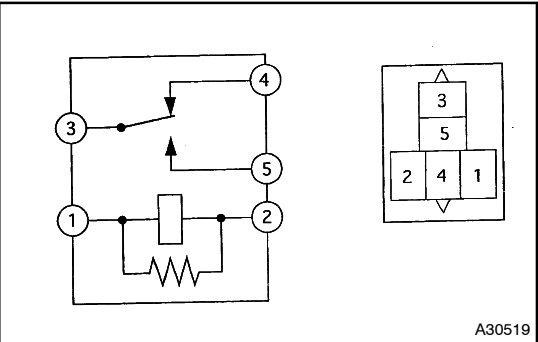

2. INSPECT COOLING FAN RELAY

- (a) Inspect the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Specified condition:

Tester Connection	Specified Condition
3 – 4	Below 1 Ω
3 – 5	10 kΩ or Higher
3 – 5	Below 1 Ω (When battery voltage is applied to terminals 1 and 2)

If the resistance is not as specified, replace the cooling fan relay.