

OIL FILTER SUB-ASSY (2AZ-FE)

REPLACEMENT


CAUTION:

- Prolonged and repeated contact with mineral oil will cause removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Precautions should be taken when replacing engine oil to minimize the risk of making your skin contact with used engine oil. Wear protective clothing and gloves. Wash your skin thoroughly with soap and water, or use waterless hand cleaner to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- In order to preserve the environment, used oil and used oil filter must be disposed of only at designated disposal sites.

1. DRAIN ENGINE OIL

- (a) Install a new gasket and drain plug after draining engine oil.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

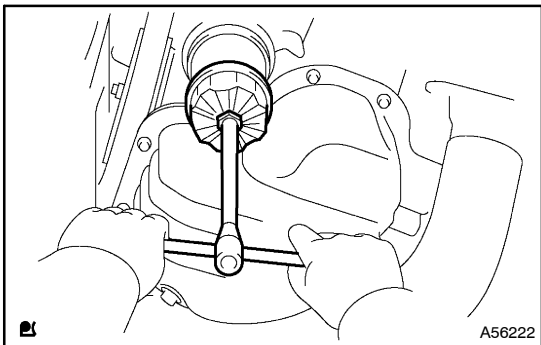


2. REMOVE OIL FILTER SUB-ASSY

- (a) Using SST, remove the oil filter.

SST 09228-06501

3. INSTALL OIL FILTER SUB-ASSY

- (a) Check and clean the oil filter installation surface.
(b) Apply clean engine oil to the gasket of a new oil filter.

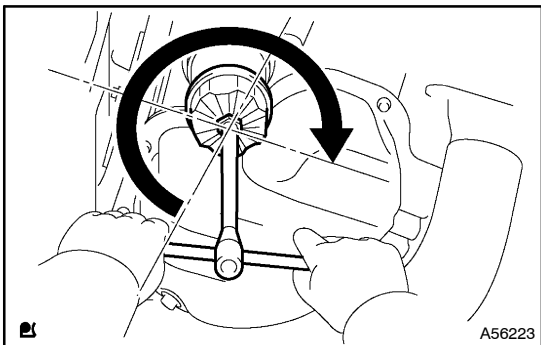

- (c) Lightly screw the oil filter into place, then tighten it until the gasket contacts the seat.

- (d) Using SST, tighten it by an additional 3/4 turn.

SST 09228-06501

Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)

4. ADD ENGINE OIL

- (a) Fill with fresh engine oil.

Capacity:

Drain and refill w/ Oil filter change 4.3 liters (4.5 US qts, 3.8 Imp. qts)

Drain and refill w/o Oil filter change 4.1 liters (4.3 US qts, 3.6 Imp. qts)

Dry fill 5.0 liters (5.3 US qts, 4.4 Imp. qts)

- (b) Install the oil filler cap.

5. CHECK FOR ENGINE OIL LEAKS