


STARTER ASSY (1AZ-FE/2AZ-FE)

REPLACEMENT


190XD-01

1. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

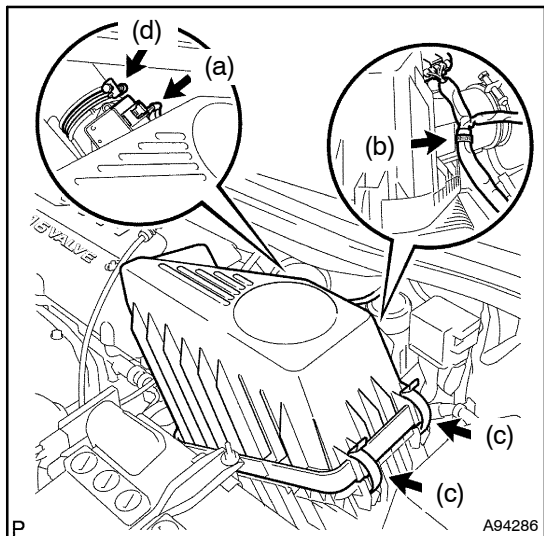


2. REMOVE AIR CLEANER ASSY

- (a) Disconnect the mass air flow meter connector.
- (b) Disconnect the wire harness clamp.
- (c) Unlock the 2 clamp hooks.
- (d) Loosen the hose clamp, then remove the air cleaner cap.
- (e) Remove the air cleaner filter element.

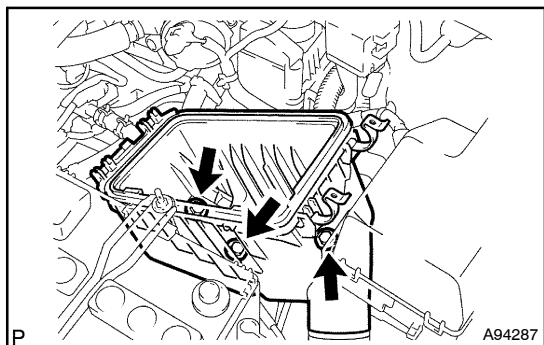

- (f) Remove the 3 bolts and air cleaner case.

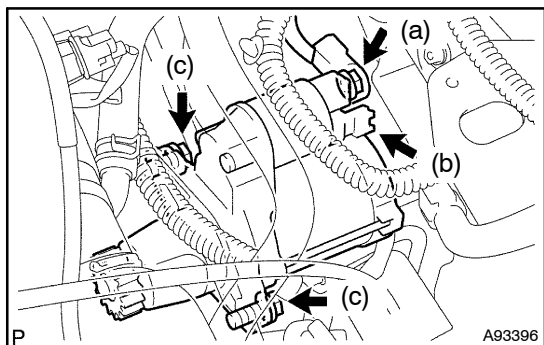

3. REMOVE STARTER ASSY

- (a) Remove the nut and starter wire.
- (b) Disconnect the starter connector.
- (c) Remove the 2 bolts and starter assembly.

4. INSTALL STARTER ASSY

Torque:

37 N·m (377 kgf·cm, 27 ft·lbf) for bolt

10 N·m (102 kgf·cm, 7.4 ft·lbf) for nut

5. INSTALL AIR CLEANER ASSY

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

6. INSTALL ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 12-8)