


INSPECTION

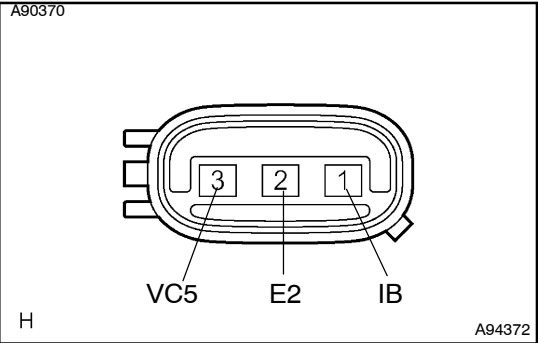


1. INSPECT BATTERY CURRENT SENSOR ASSY

- (a) Inspect the resistance.
- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
3 (VC5) – 2 (E2)	3.0 to 6.0 kΩ
2 (E2) – 3 (VC5)	0.7 to 8.0 kΩ
3 (VC5) – 1 (IB)	0.2 to 0.3 kΩ
1 (IB) – 3 (VC5)	0.2 to 3.0 kΩ
2 (E2) – 1 (IB)	1.5 to 8.0 kΩ
1 (IB) – 2 (E2)	3.0 to 6.0 kΩ

If the resistance is not as specified, replace the battery current sensor.

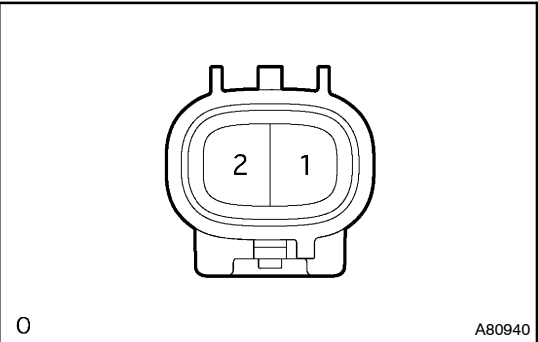

2. INSPECT BATTERY THERMOMETER SENSOR

- (a) Inspect the resistance.
- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
1 – 2	1.98 to 2.02 kΩ at 25°C (77°F)

If the resistance is not as specified, replace the battery thermometer sensor.

