


REPLACEMENT

1. **PRECAUTION** (SEE PAGE 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)

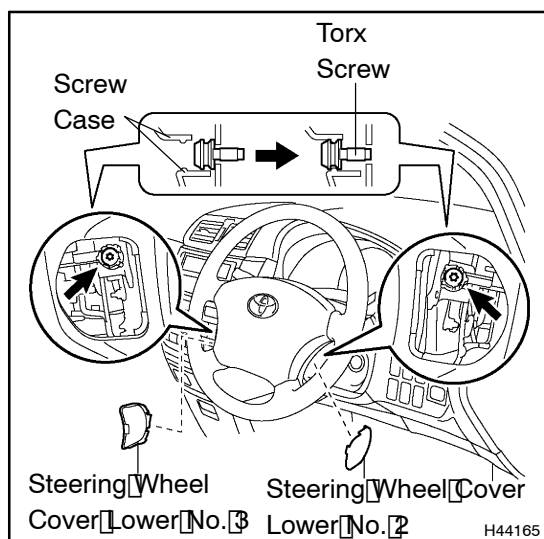

3. REMOVE STEERING WHEEL COVER LOWER NO.2

- (a) Using a screwdriver, remove the steering wheel cover lower No.2.

HINT:

Tape up the screwdriver tip before use.

4. REMOVE STEERING WHEEL COVER LOWER NO.3

- (a) Using a screwdriver, remove the steering wheel cover lower No.3.

HINT:

Tape up the screwdriver tip before use.

5. REMOVE HORN BUTTON ASSY

- (a) Place the front wheels facing straight ahead.
- (b) Using a torx socket wrench (T30), loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.
- (c) Pull out the horn button assy from the steering wheel assy and support the horn button assy with one hand as shown in the illustration.

NOTICE:



When removing the horn button assy, do not pull the airbag wire harness.

- (d) Disconnect the horn connector.
- (e) Disconnect the connectors from the horn button assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (f) Remove the horn button assy.

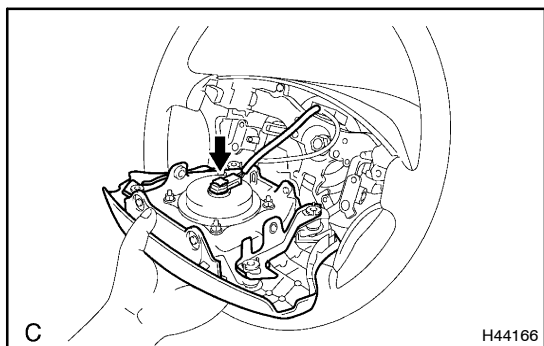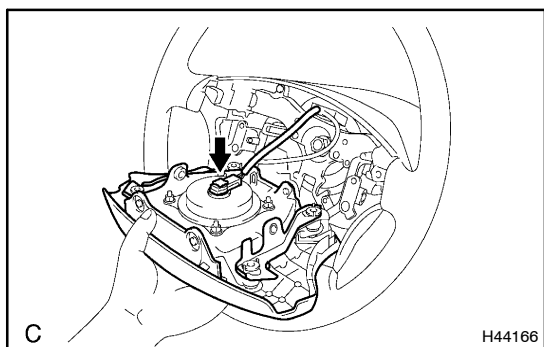

6. INSTALL HORN BUTTON ASSY

- (a) Support the horn button assy with one hand as shown in the illustration.
- (b) Connect the connectors to the horn button assy.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

- (c) Connect the horn connector.
- (d) Confirm that the circumference groove of the torx screw fits in the screw case, and place the horn button assy onto the steering wheel assy.
- (e) Using a torx socket wrench (T30), tighten the 2 torx screws.

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

7. CONNECT BATTERY NEGATIVE TERMINAL

AVENSIS/VERSO/PICNIC Supplement (RM1032E)

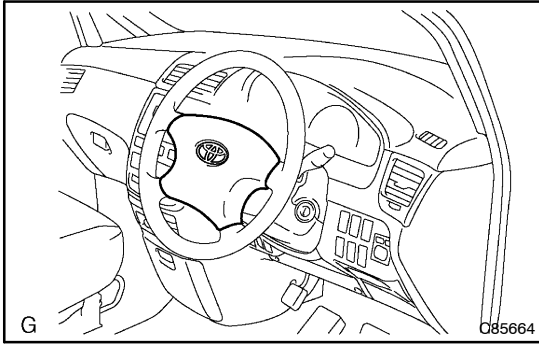**8. INSPECT HORN BUTTON ASSY**

(a) With the horn button assy installed on the vehicle, perform a visual check including the following:
Cuts, minute cracks or marked discoloration on the horn button assy top surface or in the grooved portion.

(b) Make sure that the horn sounds.

HINT:

If the horn does not sound, inspect the horn system (see Pub. No. RM864E, page 69-3).

9. INSPECT SRS WARNING LIGHT (SEE PAGE 05-972)