


REAR LAMP LENS & BODY LH

REPLACEMENT

6515V-01

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **REMOVE BACK WINDOW GARNISH (See Pub. No. RM864E, page 75-21)**
 2. **REMOVE REAR WINDOW SIDE GARNISH RH (See Pub. No. RM864E, page 75-21)**
 3. **REMOVE REAR WINDOW SIDE GARNISH LH (See Pub. No. RM864E, page 75-21)**
 4. **REMOVE ASSIST GRIP ASSY (See Pub. No. RM864E, page 75-21)**
 5. **REMOVE BACK DOOR TRIM BOARD ASSY (See Pub. No. RM864E, page 75-21)**

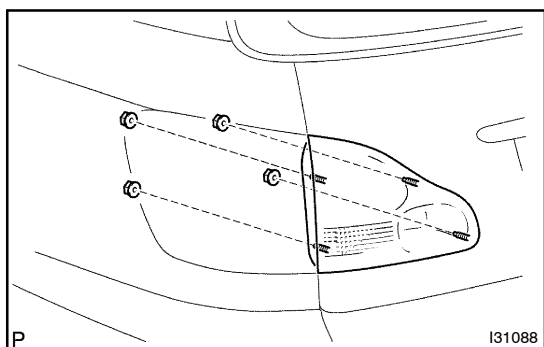

6. **REMOVE REAR LAMP ASSY LH**
 - (a) Disconnect the connector.
 - (b) Remove the 4 nuts and rear lamp assy LH.

7. **REMOVE REAR LAMP LH GASKET**
8. **REMOVE REAR LAMP BULB**
 - (a) Remove the rear lamp bulb.
9. **REMOVE REAR LAMP BULB (W/ REAR FOG LAMP)**
 - (a) Remove the 2 rear lamp bulbs.
10. **REMOVE REAR LAMP BULB (W/O REAR FOG LAMP)**
 - (a) Remove the rear lamp bulb.
11. **REMOVE REAR LAMP LENS & BODY LH**