


# TELEVISION CAMERA ASSY REPLACEMENT

6719T-01

## HINT:

Installation is in the reverse order of removal.

1. REMOVE BACK WINDOW GARNISH (SEE PUB. No. RM864E, PAGE 75-21)
2. REMOVE REAR WINDOW SIDE GARNISH RH (SEE PUB. No. RM864E, PAGE 75-21)
3. REMOVE REAR WINDOW SIDE GARNISH LH (SEE PUB. No. RM864E, PAGE 75-21)
4. REMOVE ASSIST GRIP ASSY (SEE PUB. No. RM864E, PAGE 75-21)
5. REMOVE BACK DOOR TRIM BOARD ASSY (SEE PUB. No. RM864E, PAGE 75-21)
6. REMOVE BACK DOOR OUTSIDE HANDLE (SEE PUB. No. RM864E, PAGE 75-21)
7. REMOVE BACK DOOR GARNISH OUTSIDE (SEE PUB. No. RM864E, PAGE 76-19)

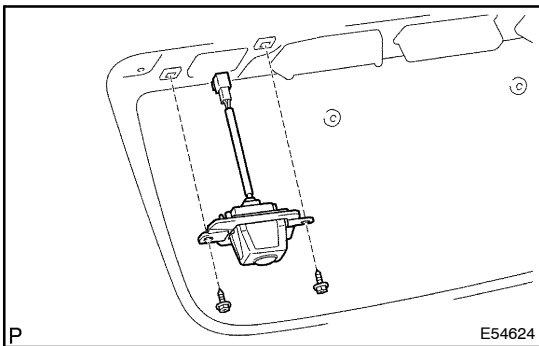

## 8. REMOVE TELEVISION CAMERA ASSY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and television camera assy.

## 9. ADJUST TELEVISION CAMERA AIM (SEE PAGE 05-1183)