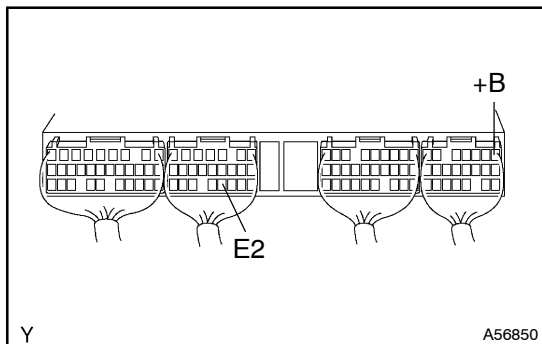


**DTC****17****IC CIRCUIT MALFUNCTION****INSPECTION PROCEDURE****1 INSPECT ECM**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals +B and E2 of the ECM connector.

**Voltage: 9 - 14 V****OK****CHECK AND REPLACE ECM****NG****CHECK FOR ECM POWER SOURCE CIRCUIT (See page 05-263)**