


TERMINALS OF ECU

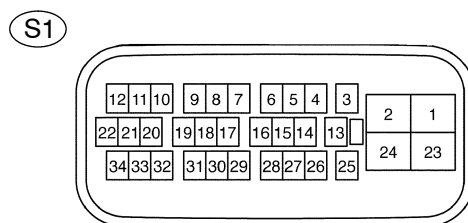

F07812

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
+BS (S1-1) – GND (S1-2, 24)	B ⇔ W-B	Always	10 – 14
FL+ (S1-9) – FL- (S1-10)	P ⇔ V	IG switch ON, slowly turn left front wheel	AC generation
RL+ (S1-11) – RL- (S1-12)	W ⇔ B	IG switch ON, slowly turn left rear wheel	AC generation
BRL (S1-4) – GND (S1-2, 24)	B-R ⇔ W-B	IG switch ON, brake warning light ON	8 – 14
D/G (S1-14) – GND (S1-2, 24)	W ⇔ W-B	IG switch ON	10 – 14
Ts (S1-15) – GND (S1-2, 24)	L-R ⇔ W-B	IG switch ON	10 – 14
Tc (S1-16) – GND (S1-2, 24)	P-B ⇔ W-B	IG switch ON	10 – 14
STP- (S1-18) – GND (S1-2, 24)	G-W ⇔ W-B	Stop light switch ON	8 – 14
+BM (S1-23) – GND (S1-2, 24)	B-R ⇔ W-B	Always	10 – 14
IG1 (S1-25) – GND (S1-2, 24)	B-Y ⇔ W-B	IG switch ON	10 – 14
WA (S1-26) – GND (S1-2, 24)	Y-G ⇔ W-B	IG switch ON, ABS warning light ON	8 – 14
FR+ (S1-31) – FR- (S1-32)	Y-B ⇔ W-L	IG switch ON, slowly turn right front wheel	AC generation
RR+ (S1-33) – RR- (S1-34)	L ⇔ Y	IG switch ON, slowly turn right rear wheel	AC generation