


DTC	C1251/51	PUMP MOTOR IS LOCKED/OPEN CIRCUIT IN PUMP MOTOR GROUND
-----	----------	--

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251/51	ABS actuator pump motor is not operating normally during initial check.	ABS pump motor

WIRING DIAGRAM

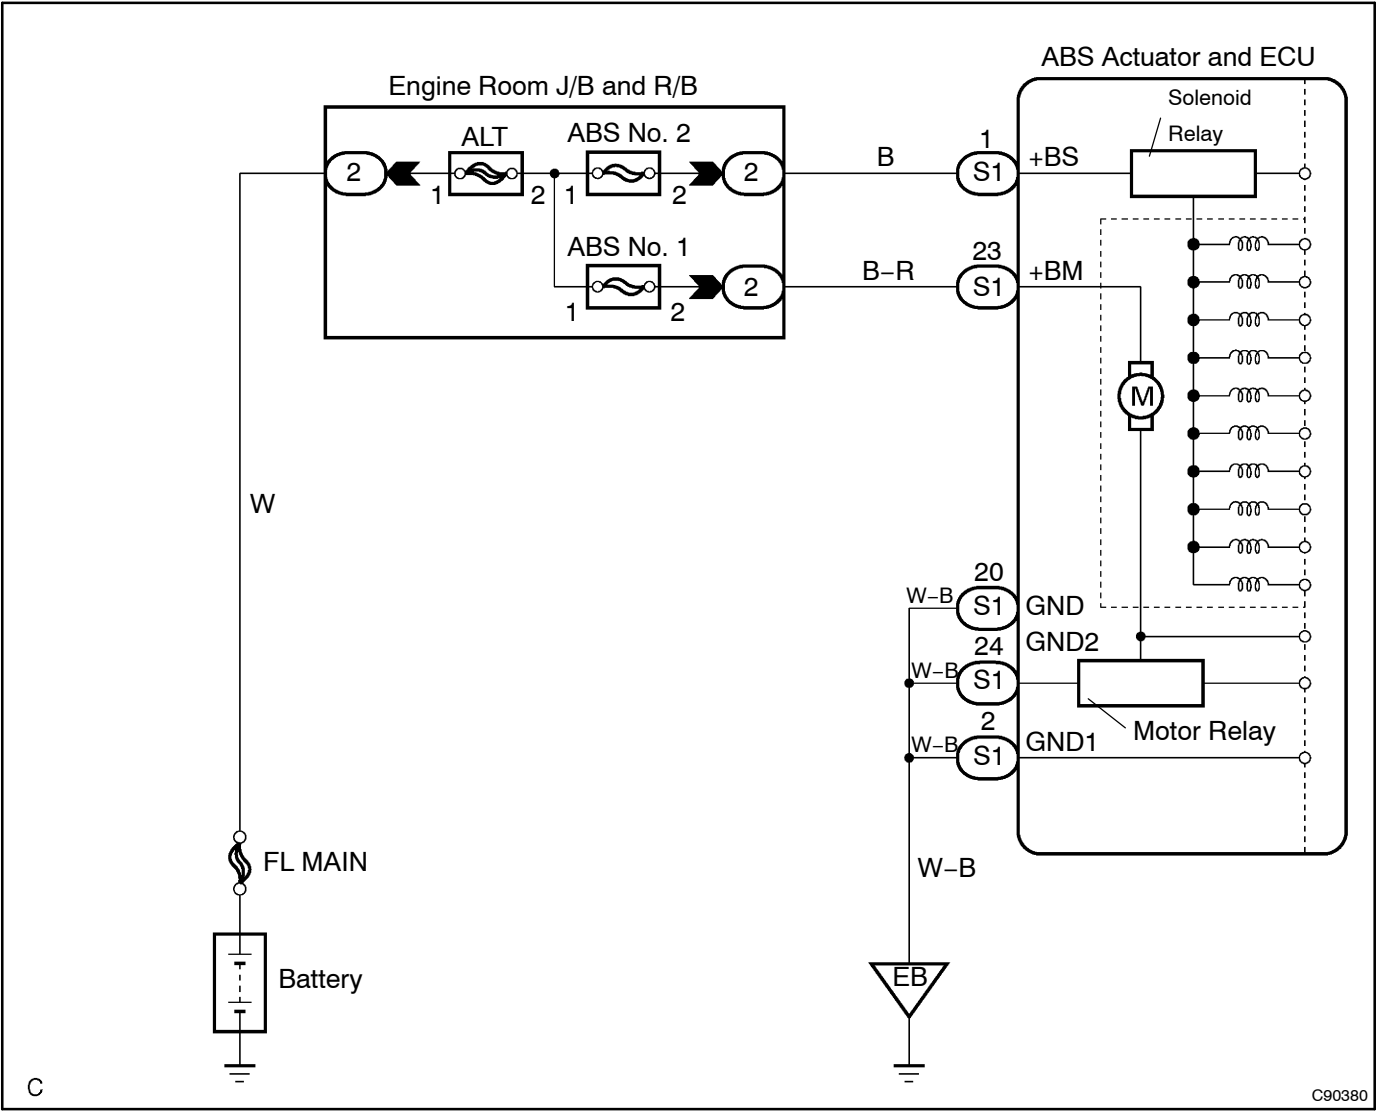

INSPECTION PROCEDURE

1 DO ACTIVE TEST OF BRAKE ACTUATOR ASSY

- (a) Check the operation sound of the ABS pump motor when operating it with the hand-held tester.
OK:
The operation sound of the ABS pump motor should be heard.

NG CHECK AND REPLACE BRAKE ACTUATOR ASSY

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOM TABLE (See page 05-304)