

C90376

INSPECTION PROCEDURE**1** CHECK/RECONFIRM DTC (See page 05-295)**OK****REPAIR CIRCUIT INDICATED BY OUTPUT CODE****NG****2** CHECK HARNESS AND CONNECTOR (BRAKE ACTUATOR ASSEMBLY - DLC3)
(See page 01-30)**NG****REPAIR OR REPLACE HARNESS AND CONNECTOR****OK****CHECK AND REPLACE BRAKE ACTUATOR ASSY**