

ABS WARNING LIGHT CIRCUIT(DOES NOT LIGHT UP)

CIRCUIT DESCRIPTION

Refer to ABS Warning Light Circuit (Remains ON) on [page 05-331](#).

WIRING DIAGRAM

Refer to ABS Warning Light Circuit (Remains ON) on [page 05-331](#).

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using hand-held tester.

1 DO ACTIVE TEST OF HAND-HELD TESTER

(a) Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the hand-held tester.

OK

CHECK AND REPLACE BRAKE ACTUATOR ASSY

NG

2 INSPECT COMBINATION METER ASSEMBLY (ABS WARNING LIGHT CIRCUIT)  
([See page 71-1](#))

NG

REPAIR OR REPLACE COMBINATION METER ASSEMBLY

OK

CHECK AND REPAIR HARNESS AND CONNECTOR (BRAKE ACTUATOR ASSEMBLY - GAUGE FUSE)