


## BRAKE WARNING LIGHT CIRCUIT

### CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the brake warning light at the same time of prohibiting ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and CG of the DLC3 to make the brake warning light blink and output the DTC.

### WIRING DIAGRAM

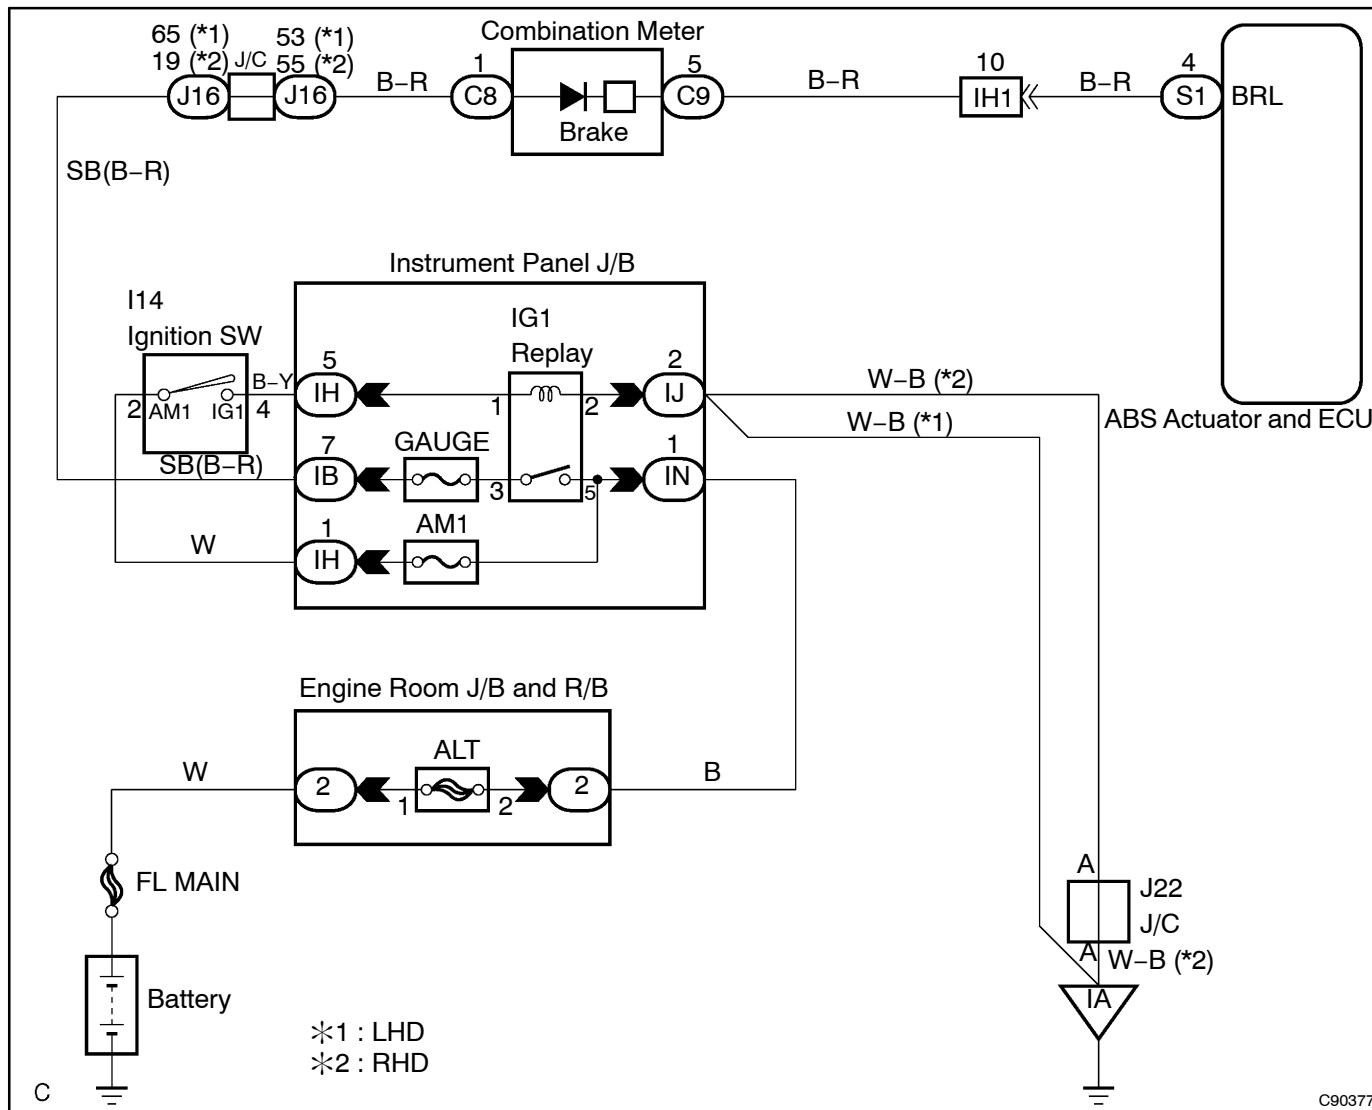

### INSPECTION PROCEDURE

#### 1 INSPECT PARKING BRAKE SWITCH CIRCUIT

NG

REPAIR OR REPLACE PARKING BRAKE SWITCH CIRCUIT

OK

2 CHECK RECONFIRM DTC (See page 05-295)

NG

REPAIR CIRCUIT INDICATED BY OUTPUT CODE

OK

3 INSPECT COMBINATION METER ASSEMBLY (BRAKE WARNING LIGHT CIRCUIT) (See page 71-1)

NG

REPAIR OR REPLACE COMBINATION METER ASSEMBLY

OK

4 CHECK HARNESS AND CONNECTOR (BRAKE ACTUATOR ASSEMBLY - COMBINATION METER ASSEMBLY) (See page 01-30)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE BRAKE ACTUATOR ASSY