


## TC TERMINAL CIRCUIT

### CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

### WIRING DIAGRAM

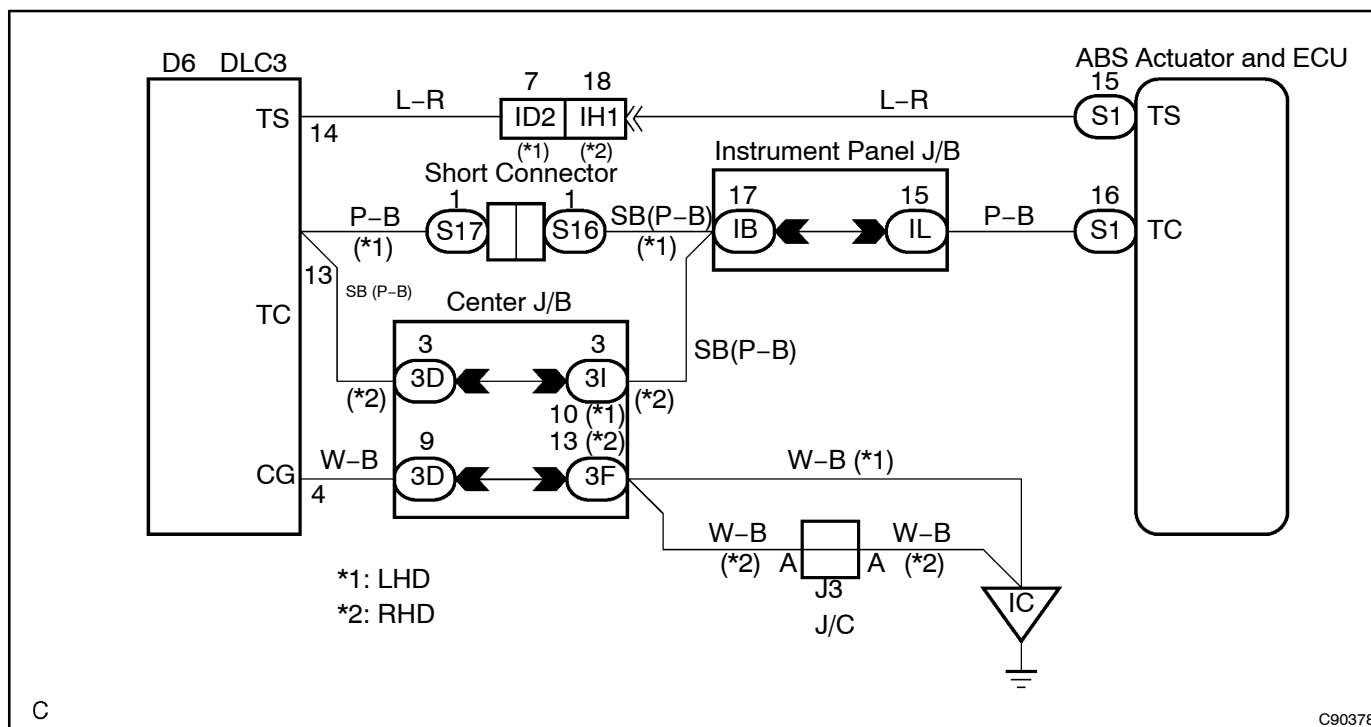

### INSPECTION PROCEDURE

#### 1 INSPECT DLC3

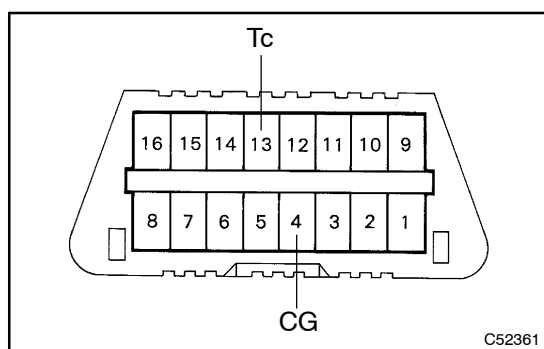

- Turn the ignition switch ON.
- Measure voltage between terminals Tc and CG of DLC3.  
**Voltage: 10 - 14 V**

OK

Go to step 3

NG

2 **CHECK HARNESS AND CONNECTOR (BRAKE ACTUATOR ASSEMBLY - DLC3 - BODY GROUND) (See page 01-30)**


NG **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

**CHECK AND REPLACE BRAKE ACTUATOR ASSY**

3 **INSPECT ABS WARNING LIGHT**

SST 09843-18040

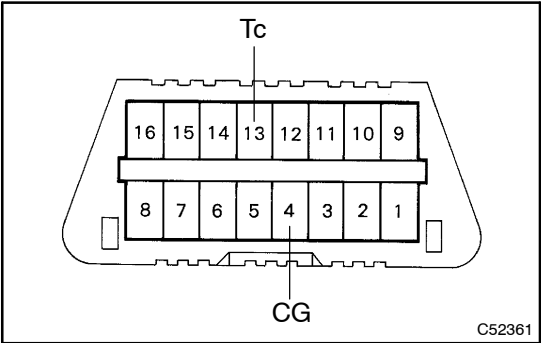

- (a) Using SST, connect the terminals Tc and CG of the DLC3.
  - (b) Check the ABS warning light.
- OK:**  
**ABS warning light blinking**

OK **NO PROBLEM**

NG

**CHECK AND REPLACE BRAKE ACTUATOR ASSY**