

DIAGNOSTIC TROUBLE CODE CHART

DTC No. (See page)	Detection Item	Trouble Area	SRS Warning Light
B0100/13 (05-416)	• SHORT IN P/SQUIB CIRCUIT	• Horn button Assy (squib) • Spiral cable sub-assy • Airbag sensor Assy center • Instrument panel wire	ON
B0101/14 (05-420)	• OPEN IN P/SQUIB CIRCUIT	• Horn button Assy (squib) • Spiral cable sub-assy • Airbag sensor Assy center • Instrument panel wire	ON
B0102/11 (05-424)	• SHORT IN P/SQUIB CIRCUIT (TO GROUND)	• Horn button Assy (squib) • Spiral cable sub-assy • Airbag sensor Assy center • Instrument panel wire	ON
B0103/12 (05-428)	• SHORT IN P/SQUIB CIRCUIT (TO B+)	• Horn button Assy (squib) • Spiral cable sub-assy • Airbag sensor Assy center • Instrument panel wire	ON
B0105/53 (05-432)	• SHORT IN P/SQUIB CIRCUIT	• Instrument panel passenger Airbag Assy (squib) • Airbag sensor Assy center • Instrument panel wire	ON
B0106/54 (05-435)	• OPEN IN P/SQUIB CIRCUIT	• Instrument panel passenger Airbag Assy (squib) • Airbag sensor Assy center • Instrument panel wire	ON
B0107/51 (05-438)	• SHORT IN P/SQUIB CIRCUIT (TO GROUND)	• Instrument panel passenger Airbag Assy (squib) • Airbag sensor Assy center • Instrument panel wire	ON
B0108/52 (05-441)	• SHORT IN P/SQUIB CIRCUIT (TO B+)	• Instrument panel passenger Airbag Assy (squib) • Airbag sensor Assy center • Instrument panel wire	ON
B0110/43 (05-444)	• SHORT IN SIDE SQUIB (RH) CIR- CUIT	• Front seat Airbag Assy (RH) (squib) • Airbag sensor Assy center • Floor wire	Blink
B0111/44 (05-447)	• OPEN IN SIDE SQUIB (RH) CIRCUIT	• Front seat Airbag Assy (RH) (squib) • Airbag sensor Assy center • Floor wire	Blink
B0112/41 (05-450)	• SHORT IN SIDE SQUIB (RH) CIRCUIT (TO GROUND)	• Front seat Airbag Assy (RH) (squib) • Airbag sensor Assy center • Floor wire	Blink
B0113/42 (05-453)	• SHORT IN SIDE SQUIB (RH) CIRCUIT (TO B+)	• Front seat Airbag Assy (RH) (squib) • Airbag sensor Assy center • Floor wire	Blink
B0115/47 (05-456)	• SHORT IN SIDE SQUIB (LH) CIRCUIT	• Front seat Airbag Assy (LH) (squib) • Airbag sensor Assy center • Floor wire No. 2	Blink
B0116/48 (05-459)	• OPEN IN SIDE SQUIB (LH) CIRCUIT	• Front seat Airbag Assy (LH) (squib) • Airbag sensor Assy center • Floor wire No. 2	Blink
B0117/45 (05-462)	• SHORT IN SIDE SQUIB (LH) CIRCUIT (TO GROUND)	• Front seat Airbag Assy LH (squib) • Airbag sensor Assy center • Floor wire No. 2	Blink
B0118/46 (05-465)	• SHORT IN SIDE SQUIB (LH) CIRCUIT (TO B+)	• Front seat Airbag Assy LH (squib) • Airbag sensor Assy center • Floor wire No. 2	Blink
B0130/63 (05-468)	• SHORT IN P/T SQUIB (RH) CIRCUIT	• Seat belt pretensioner RH (squib) • Airbag sensor Assy center • Floor wire	Blink

B0131/64 (05-471)	• OPEN IN P/T SQUIB (RH) CIRCUIT	• Seat belt pretensioner (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B0132/61 (05-474)	• SHORT IN P/T SQUIB (RH) CIRCUIT (TO GROUND)	• Seat belt pretensioner (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B0133/62 (05-477)	• SHORT IN P/T SQUIB (RH) CIRCUIT (TO B+)	• Seat belt pretensioner (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B0135/73 (05-480)	• SHORT IN P/T SQUIB (LH) CIRCUIT	• Seat belt pretensioner (LH) (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B0136/74 (05-483)	• OPEN IN P/T SQUIB (LH) CIRCUIT	• Seat belt pretensioner (LH) (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B0137/71 (05-486)	• SHORT IN P/T SQUIB (LH) CIRCUIT (TO GROUND)	• Seat belt pretensioner (LH) (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B0138/72 (05-489)	• SHORT IN P/T SQUIB (LH) CIRCUIT (TO B+)	• Seat belt pretensioner (LH) (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B1100/31 (05-492)	• AIRBAG SENSOR ASSY CENTER MALFUNCTION	• Airbag sensor assy center	ON
B1105/24 (05-494)	• HALF CONNECTION DETECTION MALFUNCTION	• Airbag sensor assy center	ON
B1140/B1146 /32 (05-502)	• SIDE AIRBAG SENSOR ASSY (RH) MALFUNCTION	• Side airbag sensor assy (RH) • Floor wire	Blink
B1141/B1147 /33 (05-507)	• SIDE AIRBAG SENSOR ASSY (LH) MALFUNCTION	• Side airbag sensor assy (LH) • Floor wire No. 2	Blink
B1156/B1157 /15 (05-496)	• FRONT AIRBAG SENSOR (RH) MALFUNCTION	• Airbag front (RH) sensor • Airbag sensor assy center • Engine room main wire harness • Instrument panel wire	ON
B1158/B1159 /16 (05-512)	• FRONT AIRBAG SENSOR (LH) MALFUNCTION	• Airbag sensor front (LH) • Airbag sensor assy center • Engine room main wire harness • Instrument panel wire	ON
B1160/83 (05-518)	• SHORT IN CURTAIN SHIELD AIRBAG (RH) SQUIB CIRCUIT	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1161/84 (05-521)	• OPEN IN CURTAIN SHIELD AIRBAG (RH) SQUIB CIRCUIT	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1162/81 (05-524)	• SHORT IN CURTAIN SHIELD AIRBAG (RH) CIRCUIT (TO GROUND)	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1163/82 (05-527)	• SHORT IN CURTAIN SHIELD AIRBAG (RH) CIRCUIT (TO B+)	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1165/87 (05-530)	• SHORT IN CURTAIN SHIELD AIRBAG (LH) SQUIB CIRCUIT	• Curtain shield airbag assy LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B1166/88 (05-533)	• OPEN IN CURTAIN SHIELD AIRBAG (LH) SQUIB CIRCUIT	• Curtain shield airbag assy LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B1167/85 (05-536)	• SHORT IN CURTAIN SHIELD AIRBAG (LH) CIRCUIT (TO GROUND)	• Curtain shield airbag assy LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink

B1188/86 (05-539)	• SHORT IN CURTAIN SHIELD AIRBAG (LH) CIRCUIT (TO B+)	• Curtain shield airbag LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
Normal (05-542)	• SYSTEM NORMAL	–	OFF
	• VOLTAGE SOURCE DROP	• Battery • Airbag sensor assy center	ON

HINT:

- When the SRS warning light remains lit up and the DTC is the normal code, this means a voltage source drops.
This malfunction is not stored in memory by the Airbag sensor assy center and if the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the codes will be displayed in numeral order starting from the lowest numbered code.
- If a code not listed on the chart is displayed, the Airbag sensor assy center is faulty.