

DTC	B1162/81	SHORT IN CURTAIN SHIELD SQUIB (RH) CIRCUIT (TO GROUND)
-----	----------	--

CIRCUIT DESCRIPTION

The curtain shield squib (RH) circuit consists of the airbag sensor assy center and curtain shield airbag assy (RH).

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B1162/81 is recorded when ground short is detected in the curtain shield squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B1162/81	<ul style="list-style-type: none"><li>• Short circuit in curtain shield squib (RH) wire harness (to ground)</li><li>• Curtain shield squib (RH) malfunction</li><li>• Airbag sensor assy malfunction</li></ul>	<ul style="list-style-type: none"><li>• Curtain shield airbag assy (RH)</li><li>• Airbag sensor assy center</li><li>• Floor wire</li></ul>

WIRING DIAGRAM

See page 05-518.

CIRCUIT INSPECTION

1	CHECK CURTAIN SHIELD SQUIB(RH) CIRCUIT
---	--

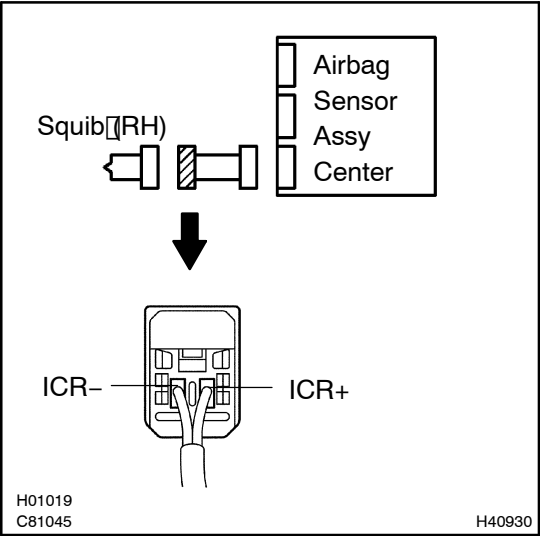

- (a) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (b) Disconnect the connectors between the airbag sensor assy center and the curtain shield airbag assy (RH).
- (c) For the connector (on the curtain shield airbag assy side) between the curtain shield airbag assy and the airbag sensor assy center, measure the resistance between ICR+ and body ground.


**OK:**  
**Resistance: 1M Ω or Higher**

NG	REPAIR OR REPLACE FLOOR WIRE
----	------------------------------

OK

## 2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

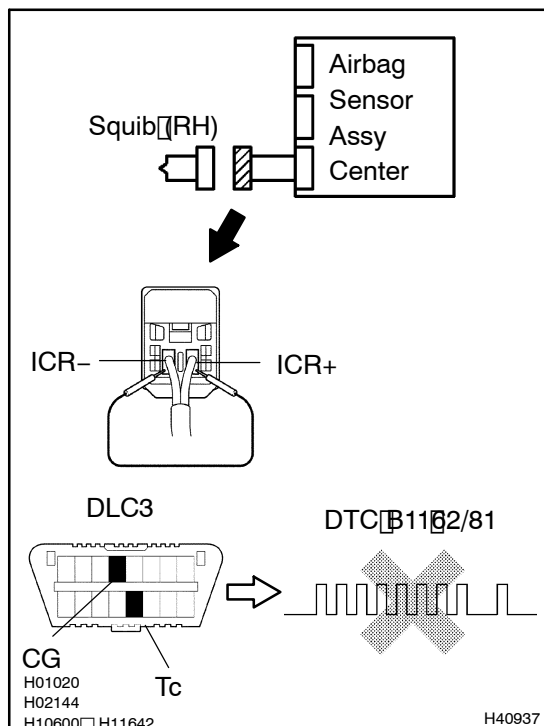

- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect ICR+ and ICR- of the connector (on the curtain shield airbag assy side) between the curtain shield airbag assy (RH) and the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-403).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-403).


**OK:****DTC B1162/81 is not output.****HINT:**

Codes other than code B1162/81 may be output at this time, but they are not relevant to this check.

**NG****REPLACE AIR BAG SENSOR ASSY CENTER****OK**

### 3 CHECK CURTAIN SHIELD SQUIB (RH)

SST 09843-18040

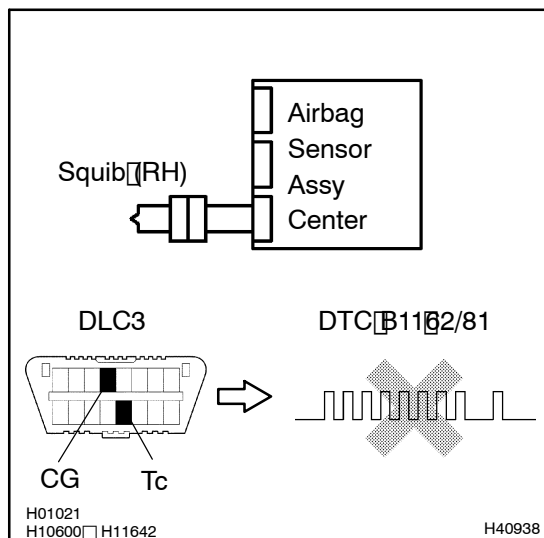

- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the curtain shield airbag Assy (RH) connector.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-403).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-403).

**OK:****DTC B1162/81 is not output.****HINT:**

Codes other than code B1162/81 may be output at this time, but they are not relevant to this check.

**NG****REPLACE CURTAIN SHIELD AIR BAG ASSY RH****OK**

### 4 USE SIMULATION METHOD TO CHECK

**NG****Go to step 1****OK****REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS**