


INSPECTION PROCEDURE

1 INSPECT RADIO RECEIVER ASSY (B, ACC, GND)

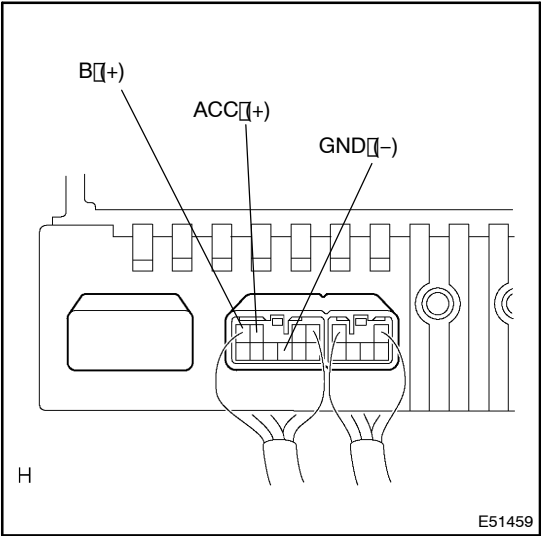

(a) Check that the continuity between terminals at each condition, as shown in the chart.

Standard:

| Tester connection | Condition | Specified condition |
|-------------------|-----------|---------------------|
| GND – Body ground | Constant | Continuity |

(b) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

| Tester connection | Condition | Specified condition |
|-------------------|---------------------------|---------------------|
| B – GND | Constant | 10 – 14 V |
| ACC – GND | Ignition switch ACC or ON | 10 – 14 V |

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR (See page 01-30)

OK

CHECK AND REPLACE RADIO RECEIVER ASSY