

PASSENGER'S DOOR WINDOW DOES NOT GO DOWN ALTHOUGH FOREIGN OBJECTS ARE CAUGHT IN BETWEEN

CIRCUIT DESCRIPTION

The passenger's power window regulator switch assembly controls the passenger's power window motor. The jam protection functions only within the operation range of the jam protection during the AUTO UP operation.

INSPECTION PROCEDURE

1 CHECK JAM PROTECTION FUNCTION OPERATING CONDITION

- (a) Turn the ignition switch ON.
 (b) The AUTO UP operation works with the ignition switch ON (One-Touch operation).

NG

NORMAL

YES

2 CHECK POWER WINDOW REGULATOR SWITCH ASSY

- (a) Check the operation.
 (1) Turn the ignition switch ON.
 (2) Check if AUTO UP and AUTO DOWN operate.

NG

AUTO UP/DOWN OPERATION OF PASSENGER'S DOOR WINDOW IS IMPOSSIBLE
 (See Page 05-620)

OK

3 CHECK JAM PROTECTION FUNCTION OPERATING RANGE

- (a) Check the jam protection function does not operate with in 4 mm before the full-closed position of the door glass.

OK

NORMAL

NG

4 RESET POWER WINDOW REGULATOR MOTOR (See page 75-6)

OK

NORMAL

NG

REPLACE POWER WINDOW REGULATORSWITCH ASSY