


MALFUNCTION IN WATER TEMPERATURE RECEIVER GAUGE

WIRING DIAGRAM

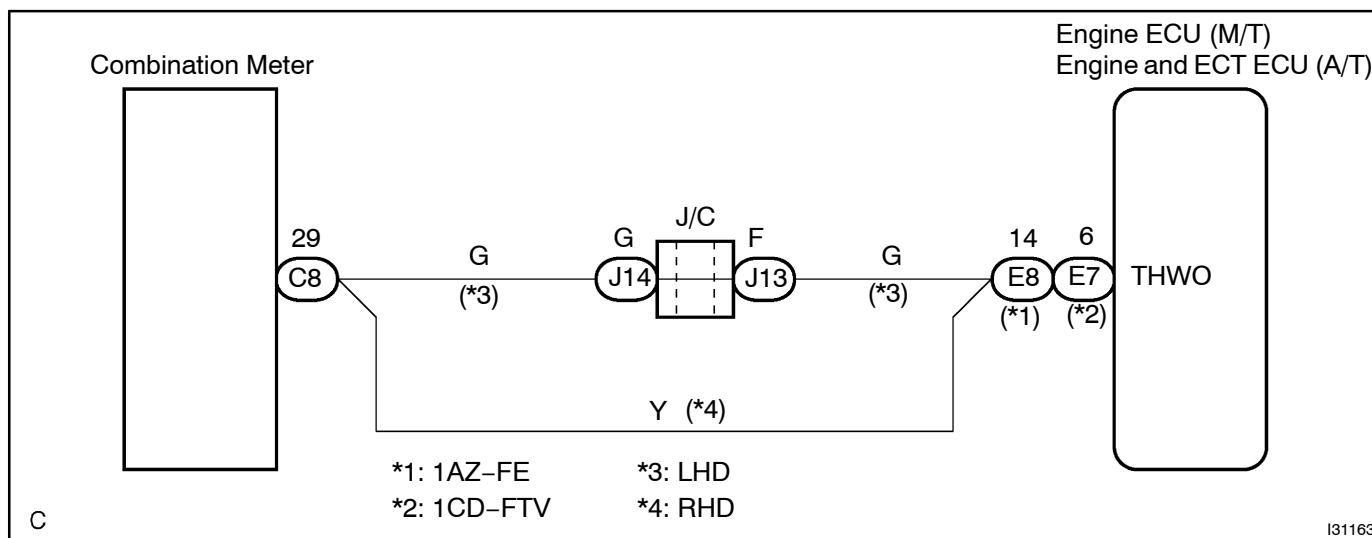

1 READ VALUE OF HAND-HELD TESTER

- (a) Check output value of speedometer.
- (1) Connect the hand-held tester to DLC3.
 - (2) Turn the ignition switch ON and push the hand-held tester main switch ON.
 - (3) Select the DATA LIST mode on the hand-held tester.
 - (4) Read the engine coolant temperature value on the hand-held tester.

OK: Same as actual engine coolant temperature.

NG → **EFI SYSTEM**

OK

2 CHECK THAT MALFUNCTION DISAPPEAR A KNOWN GOOD COMBINATION METER IS INSTALLED

- (a) Check that malfunction disappear when a known good combination meter is installed.

A	Malfunction does not disappear
B	Malfunction disappear

B → **REPAIR OR REPLACE COMPUTER, ENGINE CONTROL**

A

REPLACE COMBINATION METER ASSEMBLY