

PROBLEM SYMPTOMS TABLE

Problem/symptom	Suspected area	See page
Only wireless control function is inoperative.	1. Transmitter battery 2. Door control transmitter 3. Door control receiver 4. DOME 10A fuse 5. Body ECU 6. Unlock warning SW 7. Wire harness	05-680