

PROBLEM SYMPTOMS TABLE

| Symptom               | Suspected Area                               | See page               |
|-----------------------|--|------------------------|
| Engine does not start | 1. Key                                       | <a href="#">05-705</a> |
|                       |  | <a href="#">05-706</a> |
|                       |  | <a href="#">05-707</a> |
|                       |  | <a href="#">05-708</a> |
|                       | 2. Transponder key amplifier                 | <a href="#">05-708</a> |
|                       |  | <a href="#">05-712</a> |
|                       |  | <a href="#">05-700</a> |
|                       |  | <a href="#">05-701</a> |
|                       | 3. Transponder key ECU (1CD-FTV Engine only) | <a href="#">05-703</a> |
|                       |  | <a href="#">05-706</a> |
|                       |  | <a href="#">05-703</a> |
|                       |  | <a href="#">05-712</a> |
|                       | 4. ECM                                       | <a href="#">05-703</a> |
|                       |  | <a href="#">05-712</a> |