

PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and troubleshooting for each circuit.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Symptom	Suspected Area	See page
Theft deterrent system cannot be set.	1. Indicator light circuit 2. ECU power source circuit 3. Key unlock warning switch circuit 4. Engine hood courtesy switch circuit	71-8 05-140 – 05-726
Indicator light does not blink when system is set.	1. Indicator light circuit	71-8
When the system is set (The system does not operate when the engine hood is opened).	1. Engine hood courtesy switch circuit	05-726
While the system is in warning operation (Horns do not sound).	1. Horn circuit	05-729
Even when the system is not set (Horns sound).	1. Horn circuit	05-729