


FUEL PUMP ASSY (1AZ-FE)

11063-01

Removal & Installation and Disassembly & Reassembly

1. WORK FOR PREVENTING GASOLINE FROM SPILLING OUT (See page 11-1)
2. REMOVE FRONT SEAT ASSEMBLY LH
3. REMOVE FRONT SEAT ASSEMBLY RH
4. REMOVE REAR No.1 SEAT ASSEMBLY RH (60/40 SPLIT AND FALDING SEAT TYPE)
5. REMOVE REAR No.1 SEAT ASSEMBLY LH (60/40 SPLIT AND FALDING SEAT TYPE)
6. REMOVE REAR No.1 SEAT ASSEMBLY RH (CAPTAN SEAT TYPE)
7. REMOVE REAR No.1 SEAT ASSEMBLY LH (CAPTAN SEAT TYPE)
8. REMOVE REAR No.1 SEAT ASSEMBLY RH (3 TUMBLE AND DETACHABLE SEAT STYPE)
9. REMOVE REAR No.1 SEAT ASSEMBLY LH (3 TUMBLE AND DETACHABLE SEATS TYPE)
10. REMOVE REAR No.1 SEAT ASSEMBLY CENTER (3 TUMBLE AND DETACHABLE SEATS TYPE)
11. REMOVE FRONT DOOR SCUFF PLATE RH
(See page 76-23)
12. REMOVE FRONT DOOR SCUFF PLATE LH
(See page 76-23)
13. REMOVE REAR DOOR SCUFF PLATE RH
(See page 76-23)
14. REMOVE REAR DOOR SCUFF PLATE LH
(See page 76-23)
15. REMOVE AIR DUCT ASSY(W/ REAR HEATER)
 - (a) Remove the shift knob. (MT)
 - (b) Remove the 4 screws and shift cover. (MT)
 - (c) Remove the 2 screws and the heater air outlet grille. (2 places)
 - (d) Remove the floor carpet.
 - (e) Remove 4 screws and rear air duct.
16. REMOVE REAR SEAT LOCK STRIKER SUB-ASSY LH
 - (a) Remove 4 bolts and seat lock striker.
17. REMOVE REAR FLOOR SERVICE HOLE COVER
 - (a) Remove the rear floor service hole cover.
 - (b) Disconnect the fuel pump connector.


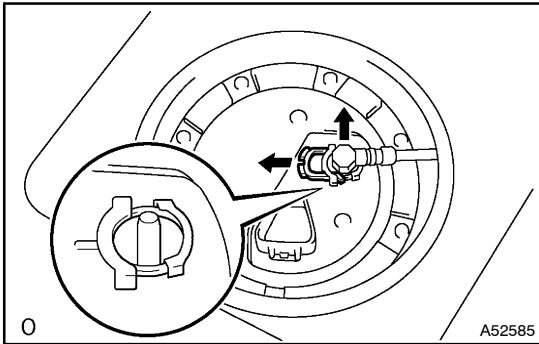


18. SEPARATE FUEL PUMP TUBE SUB-ASSY

- (a) Check if there is any dirt like mud around the connector before this work and clean dirt away.
- (b) Remove the joint clip, and pull out the fuel pump tube.

NOTICE:

- **Be careful of dirt like mud because the quick connector has an O-ring to seal the pipe and the connector.**
- **Do not use any tool in this work.**
- **Do not bend or twist the nylon tube by force.**
- **Keep off plug from foreign subjects.**
- **To protect the fuel tube, cover it with a vinyl bag after checking.**

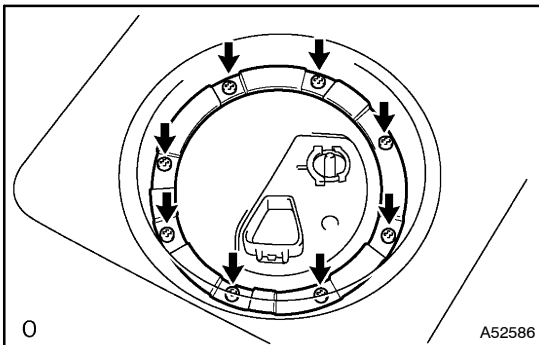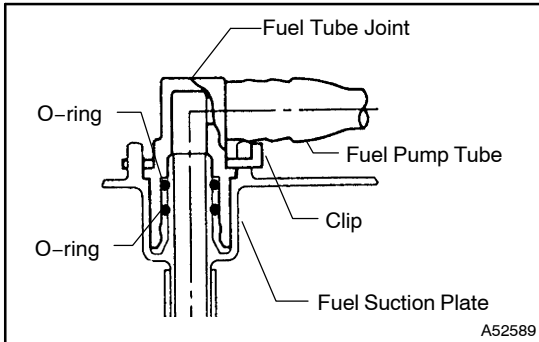

19. REMOVE FUEL TANK VENT TUBE SET PLATE

- (a) Remove the 8 bolts and fuel tank vent tube set plate.

20. REMOVE FUEL SUCTION W/PUMP & GAGE

- (a) Pull out the fuel suction w/pump & gage from the fuel tank.

NOTICE:

- **Do not damage the fuel pump filter.**
- **Be careful that the arm of the sender gage should not bent.**

21. REMOVE FUEL SUCTION SUPPORT NO.2

- (a) Using a screwdriver, disconnect the snap claws from the claw holes and remove the fuel suction support.

22. REMOVE FUEL PUMP CUSHION RUBBER

23. REMOVE FUEL PUMP ASSY W/FILTER

- (a) Disconnect the fuel pump connector from the fuel pump.
- (b) Pull out the fuel filter and the fuel pump assembly.

24. REMOVE FUEL PUMP FILTER

- (a) Remove the clip.
- (b) Pull out the suction filter from the fuel pump.

25. REMOVE FUEL SUCTION PLATE SUB-ASSY

- (a) Using a screwdriver, disconnect the 4 snap claws from the claw holes and remove the fuel suction support.

NOTICE:

Be careful not to damage the suction support and suction plate.

26. REMOVE FUEL PRESSURE REGULATOR ASSY**27. INSTALL FUEL PRESSURE REGULATOR ASSY**

- (a) Apply gasoline to a new O-ring, and install it to the pressure regulator.
 (b) Insert the pressure regulator.

28. INSTALL FUEL PUMP FILTER

- (a) Install the suction filter with a new clip.

29. INSTALL REAR FLOOR SERVICE HOLE COVER

- (a) Using a new butyl tape set, and install the rear floor service hole cover.

30. INSTALL REAR SEAT LOCK STRIKER SUB-ASSY LH

- (a) Install 4 bolts and seat lock striker.
Torque: 39 N·m (400 kgf·cm, 29 ft·lb)

31. INSTALL AIR DUCT ASSY (W/ REAR HEATER)

- (a) Install 4 screws and the air duct assy.
 (b) Install the floor carpet.
 (c) Install the 2 screws and the heater air outlet grille. (2 places)

32. INSTALL REAR No.1 SEAT ASSEMBLY RH (60/40 SPLIT AND FALDDING SEAT TYPE)**33. INSTALL REAR No.1 SEAT ASSEMBLY LH (60/40 SPLIT AND FALDDING SEAT TYPE)****34. INSTALL FRONT SEAT ASSEMBLY LH****35. INSTALL FRONT SEAT ASSEMBLY RH****36. INSPECT FUEL LEAK (See page 11-1)**