

Removal & Installation and Disassembly & Reassembly

1. **WORK FOR PREVENTING GASOLINE FROM SPILLING OUT** (See page 11-1)
2. REMOVE FRONT SEAT ASSEMBLY LH
3. REMOVE FRONT SEAT ASSEMBLY RH
4. REMOVE REAR No.1 SEAT ASSEMBLY RH (60/40 SPLIT AND FALLDING SEAT TYPE)
5. REMOVE REAR No.1 SEAT ASSEMBLY LH (60/40 SPLIT AND FALLDING SEAT TYPE)
6. REMOVE REAR No.1 SEAT ASSEMBLY RH (CAPTAN SEAT TYPE)
7. REMOVE REAR No.1 SEAT ASSEMBLY LH (CAPTAN SEAT TYPE)
8. REMOVE REAR No.1 SEAT ASSEMBLY RH (3 TUMBLE AND DETACHABLE SEAT STYPE)
9. REMOVE REAR No.1 SEAT ASSEMBLY LH (3 TUMBLE AND DETACHABLE SEATS TYPE)
10. REMOVE REAR No.1 SEAT ASSEMBLY CENTER (3 TUMBLE AND DETACHABLE SEATS TYPE)
11. REMOVE FRONT DOOR SCUFF PLATE RH
(See page 76-23)
12. REMOVE FRONT DOOR SCUFF PLATE LH
(See page 76-23)
13. REMOVE REAR DOOR SCUFF PLATE RH
(See page 76-23)
14. REMOVE REAR DOOR SCUFF PLATE LH
(See page 76-23)
15. REMOVE AIR DUCT ASSY(W/ REAR HEATER)
(See page 11-13)
16. REMOVE REAR SEAT LOCK STRIKER SUB-ASSY LH
 - (a) Remove 4 bolts and seat lock striker.
17. **REMOVE REAR FLOOR SERVICE HOLE COVER** (See page 11-13)
18. REMOVE FUEL PUMP TUBE SUB-ASSY
(See page 11-13)
19. REMOVE FUEL TANK VENT TUBE SET PLATE
(See page 11-13)
20. **REMOVE FUEL SUCTION W/PUMP & GAGE** (See page 11-13)
21. DRAIN FUEL
22. REMOVE EXHAUST PIPE ASSY CENTER
23. REMOVE FUEL TANK PROTECTOR NO.2
24. REMOVE FUEL TANK PROTECTOR NO.1
 - (a) Using a drill, remove the rivets and then fuel tank protector.
25. **SEPARATE PARKING BRAKE CABLE NO.2 CLAMP**
 - (a) Remove the bolt and clamp.
26. **SEPARATE PARKING BRAKE CABLE NO.3 CLAMP**
 - (a) Remove the bolt and clamp.
27. **SEPARATE FUEL TANK TO FILLER PIPE HOSE**
28. **SEPARATE FUEL TANK BREATHER TUBE SUB-ASSY NO.2**

29. SEPARATE FUEL MAIN TUBE**30. SEPARATE FUEL TANK TO CANISTER TUBE****31. REMOVE FUEL TANK ASSY**

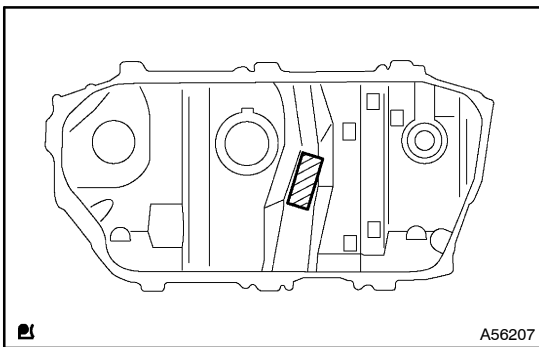
- (a) Remove the 6 bolts and fuel tank.

32. REMOVE FUEL TANK SIDE PLATE**33. REMOVE FUEL HOSE NO.2****34. REMOVE FUEL TUBE CLAMP NO.3****35. REMOVE FUEL TANK PROTECTOR SUB-ASSY NO.1**

- (a) Using a drill, remove the rivets and then fuel tank protector.

36. INSTALL FUEL TANK PROTECTOR SUB-ASSY NO.1

- (a) Install the fuel tank protector with rivets.

**37. INSTALL FUEL TANK CUSHION NO.1**

- (a) Install the new fuel tank cushion as shown in the illustration.

38. INSTALL FUEL TANK ASSY

- (a) Install the fuel tank with 6 bolts.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

39. INSTALL PARKING BRAKE CABLE NO.2 CLAMP

Torque: 5.4 N·m (55 kgf·cm, 47 in·lbf)

40. INSTALL PARKING BRAKE CABLE NO.3 CLAMP

Torque: 5.4 N·m (55 kgf·cm, 47 in·lbf)

41. INSTALL FUEL TANK PROTECTOR NO.1

- (a) Install the fuel tank protector with rivets.

42. INSTALL FUEL TANK PROTECTOR NO.2

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

43. INSTALL EXHAUST PIPE ASSY CENTER

([See page 15-1](#))

44. □ INSTALL REAR FLOOR SERVICE HOLE COVER ([See page 11-13](#))**45. INSTALL REAR SEAT LOCK STRIKER SUB-ASSY LH**

- (a) Install 4 bolts and seat lock striker.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

46. INSTALL AIR DUCT ASSY(W/ REAR HEATER)

- (a) Install 4 screws and the air duct assy.

- (b) Install the floor carpet.

- (c) Install the 2 screws and the heater air outlet grille. (2 places)

47. INSTALL REAR No.1 SEAT ASSEMBLY RH (60/40 SPLIT AND FALDDING SEAT TYPE)**48. INSTALL REAR No.1 SEAT ASSEMBLY LH (60/40 SPLIT AND FALDDING SEAT TYPE)****49. INSTALL FRONT SEAT ASSEMBLY LH****50. INSTALL FRONT SEAT ASSEMBLY RH****51. □ INSPECT FUEL LEAK ([See page 11-1](#))****52. CHECK EXHAUST LEAKAGE**