


THERMOSTAT (1AZ-FE)

REPLACEMENT

1606J-01


1. DRAIN COOLANT (See page 16-6)
2. REMOVE FAN AND GENERATOR V BELT
(See page 14-5)
SST 09249-63010
3. REMOVE GENERATOR ASSY
(See page 19-7)

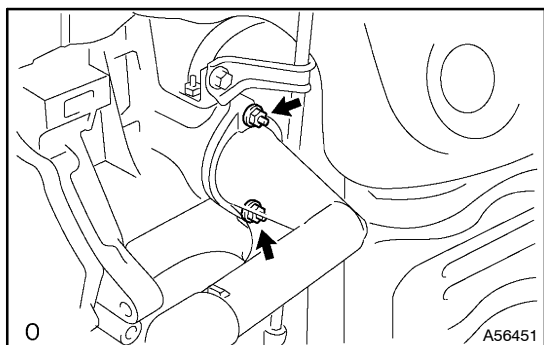

4. REMOVE WATER INLET

- (a) Remove 2 nuts, and disconnect the water inlet from the cylinder block.

5. REMOVE THERMOSTAT

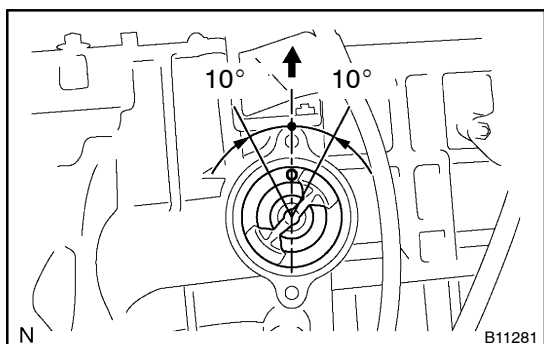

6. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 10° on either side of the prescribed position.

7. INSTALL WATER INLET

- (a) Install the water inlet with 2 nuts.
Torque: 9 N·m (92 kgf·cm, 7 in.·lbf)

8. INSTALL GENERATOR ASSY (See page 19-7)

9. INSTALL FAN AND GENERATOR V BELT (See page 14-5)

SST 09249-63010

10. ADD COOLANT (See page 16-6)

11. INSPECT CHECK ENGINE COOLANT LEAK (See page 16-6)