

RADIATOR ASSY (1AZ-FE)

Removal & Installation and Disassembly & Reassembly

1. DRAIN COOLANT (See page 16-6)
2. SEPARATE RADIATOR HOSE INLET
3. SEPARATE RADIATOR HOSE OUTLET
4. REMOVE HOOD LOCK ASSY
 - (a) Remove the 3 bolts and the hood lock.
5. REMOVE RADIATOR SUPPORT SUB-ASSY UPPER
 - (a) Disconnect the fan w/ motor wire harness, connector and the horn connector.
 - (b) Remove the 4 bolts, the nut and the radiator support.
6. REMOVE RADIATOR ASSY
 - (a) Remove the 2 upper support, and radiator assembly
7. REMOVE RADIATOR SUPPORT LOWER
8. REMOVE FAN ASSY, W/MOTOR
 - (a) Remove the 6 bolts and fan w/motor.
9. INSTALL RADIATOR SUPPORT SUB-ASSY UPPER
 - (a) Install radiator support with the 4 bolts and nut.
Torque: 7 N·m (71 kgf·cm, 62 in.·lbf)
10. INSTALL HOOD LOCK ASSY
(See page 75-1)
11. ADD COOLANT (See page 16-6)
12. INSPECT / CHECK ENGINE COOLANT LEAK (See page 16-6)