


THERMOSTAT(1CD-FTV)

REPLACEMENT

1606S-01


1. DRAIN ENGINE COOLANT(See page 16-19)
2. REMOVE RADIATOR RESERVE TANK ASSY
3. REMOVE RADIATOR HOSE OUTLET

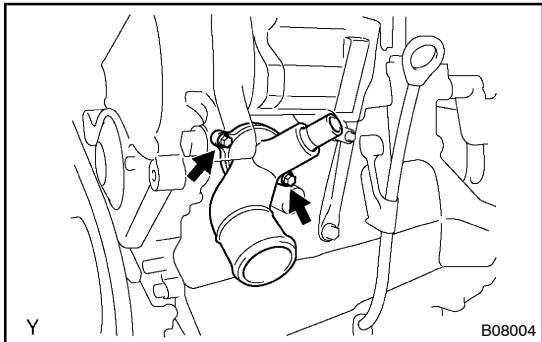

4. REMOVE WATER INLET

- (a) Remove the 2 bolts and water inlet.

5. REMOVE THERMOSTAT

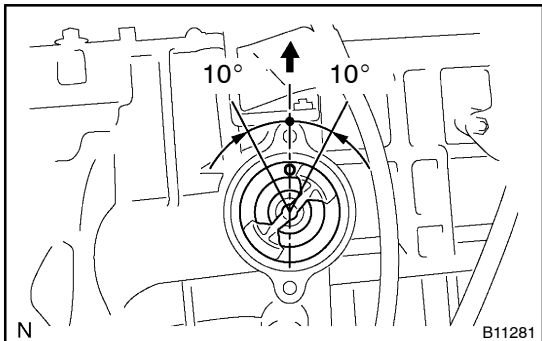

6. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 10° on either side of the prescribed position.

7. INSTALL WATER INLET

- (a) Install the water inlet with 2 bolts.
Torque: 9 N·m (90 kgf·cm, 78 in·lbf)
8. ADD COOLANT(See page 16-19)
9. CHECK ENGINE COOLANT LEAK(See page 16-13)