

STARTER ASSY (1CD-FTV)

REPLACEMENT

1. DRAIN ENGINE COOLANT (See page 16-19)
2. REMOVE RADIATOR RESERVE TANK ASSY
3. REMOVE STARTER ASSY
 - (a) Disconnect the starter connector.
 - (b) Remove the nut and disconnect the terminal 30.
 - (c) Remove the 2 bolts and starter.
4. INSTALL STARTER ASSY

Torque:
Bolt 45 N·m (459 kgf·cm, 33 ft·lbf)
Terminal 30 13 N·m (130 kgf·cm, 9 ft·lbf)
5. ADD COOLANT (See page 16-19)
6. CHECK ENGINE COOLANT LEAK (See page 16-13)