


# GLOW PLUG ASSY (1CD-FTV)


## REPLACEMENT

### 1. REMOVE ENGINE COVER SUB-ASSY NO.1

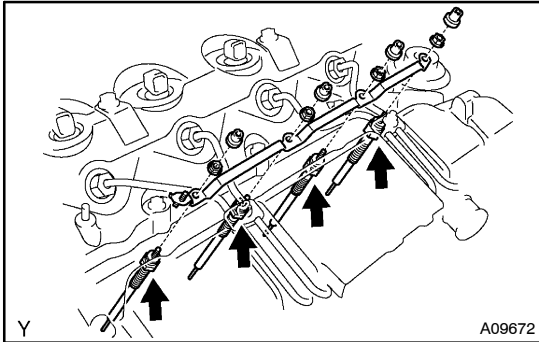

### 2. REMOVE GLOW PLUG ASSY

- (a) Remove the 4 grommets.
- (b) Remove the 4 nuts and glow plug connector.
- (c) Remove the 4 glow plugs.

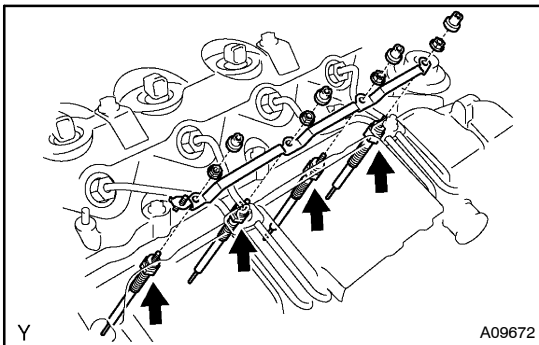

### 3. INSTALL GLOW PLUG ASSY

- (a) Install the glow plugs.  
**Torque: 12.3 N·m (125 kgf·cm, 9 ft·lbf)**
- (b) Install the glow plug connector with the 4 nuts.
- (c) Install the 4 grommets.

### 4. INSTALL ENGINE COVER SUB-ASSY NO.1

#### Torque:

8.0 N·m (82 kgf·cm, 71 in·lbf) for bolt

12 N·m (122 kgf·cm, 8.8 ft·lbf) for nut